

TEST CASE DOCUMENTATION AND TESTING RESULTS

LSTC-QA-LS-DYNA-AWG-ERIF-3-12

TEST CASE ID AWG-ERIF-3

Rubber Projectile Impacting a Rigid Plate

Tested with LS-DYNA® R11.0 Revision 130010

Tuesday 25th September, 2018

Warranty Disclaimer:

The test case(s) described herein are for illustrative purposes only. LSTC does not warrant that a user of these or other LS-DYNA features will experience the same or similar results or that a feature will meet the user's particular requirements or operate error free. FURTHERMORE, THERE ARE NO WARRANTIES, EITHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, WITH RESPECT TO THE DOCUMENTATION AND SOFTWARE DESCRIBED HEREIN INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES (i) OF MERCHANTABILITY, OR (ii) FITNESS FOR A PARTICULAR PURPOSES, OR (iii) ARISING FROM COURSE OF PERFORMANCE OR DEALING, OR FROM USAGE OF TRADE OR. THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER REMEDIES FOR BREACH OF WARRANTY.

Document Information	
Confidentiality	external use
Document Identifier	LSTC-QA-LS-DYNA-AWG-ERIF-3-12
Author(s)	Prepared by LS-DYNA® Aerospace Working Group
Number of pages	23
Date created	Tuesday 25 th September, 2018
Distribution	LS-DYNA® Aerospace Working Group / internal LSTC QA

Contents

1	Introduction	1
1.1	Purpose of this Document	1
2	Test Case Information	2
3	Test Case Specification	3
3.1	Test Case Purpose	3
3.2	Test Case Description	4
3.3	Model Description	5
4	Test Specifications	7
4.1	Test Case Targets	7
4.2	Pass/Fail Criteria	9
5	Test Case Results	10
5.1	Software and Hardware Specifications	10
5.2	Results Summary	11
5.3	Result Details	12
5.3.1	Sub Test Case ID 1 - Test Target 1	13
5.3.2	Sub Test Case ID 1 - Test Target 2	13
5.3.3	Sub Test Case ID 1 - Test Target 3	14
5.3.4	Sub Test Case ID 1 - Test Target 4	14
5.3.5	Sub Test Case ID 1 - Test Target 5	15
5.3.6	Sub Test Case ID 1 - Test Target 6	15
5.3.7	Sub Test Case ID 1 - Test Target 7	16
5.3.8	Sub Test Case ID 1 - Test Target 8	16
5.3.9	Sub Test Case ID 1 - Test Target 9	17
5.3.10	Sub Test Case ID 1 - Test Target 10	17
5.3.11	Sub Test Case ID 2 - Test Target 1	18
5.3.12	Sub Test Case ID 2 - Test Target 2	18
5.3.13	Sub Test Case ID 2 - Test Target 3	19
5.3.14	Sub Test Case ID 2 - Test Target 4	19
5.3.15	Sub Test Case ID 2 - Test Target 5	20
5.3.16	Sub Test Case ID 2 - Test Target 6	20
5.3.17	Sub Test Case ID 2 - Test Target 7	21
5.3.18	Sub Test Case ID 2 - Test Target 8	21
5.3.19	Sub Test Case ID 2 - Test Target 9	22
5.3.20	Sub Test Case ID 2 - Test Target 10	22
	References	23

1 Introduction

1.1 Purpose of this Document

This document specifies the test case AWG-ERIF-3. It provides general test case information like name and ID as well as information to the confidentiality, status, and classification of the test case.

A detailed description of the test case is given, the purpose of the test case is defined, and the tested features are named. The test case specifications also state the target measures for testing and the expected results, as well as their pass and fail criteria.

Testing results are provided in section 5 for the therein mentioned LS-DYNA® version and platforms.

2 Test Case Information

Test Case Summary	
Confidentiality	external use
Test Case Name	Rubber Projectile Impacting a Rigid Plate
Test Case ID	AWG-ERIF-3
Test Case Status	active
Test Case Classification	Example
Test Case Source	University of Akron
Tested Keyword	*MAT_181 (MAT_SIMPLIFIED_RUBBER)
Member of Test Suite	AWG ERIF SUITE
Metadata	AWG ERIF

Table 1: Test Case Summary

3 Test Case Specification

3.1 Test Case Purpose

The purpose of Test Case ID AWG-ERIF-3 is the comparison of results from different cpu architectures for a bird strike analysis. The cross cpu architecture consistency of LS-DYNA® for this impact simulation is evaluated by performing calculations of two sub test cases with different material parameter curves for the rubber material (see table 4).

3.2 Test Case Description

This Test Case contains a bird strike analysis (see figure 1) using a rubber projectile with rate effects impacting a rigid plate. The rubber projectile is used to represent the "bird material" and is modelled using *MAT_SIMPLIFIED_RUBBER (MAT_181). Two different curves of force vs. change in gauge length at different strain rates are evaluated.

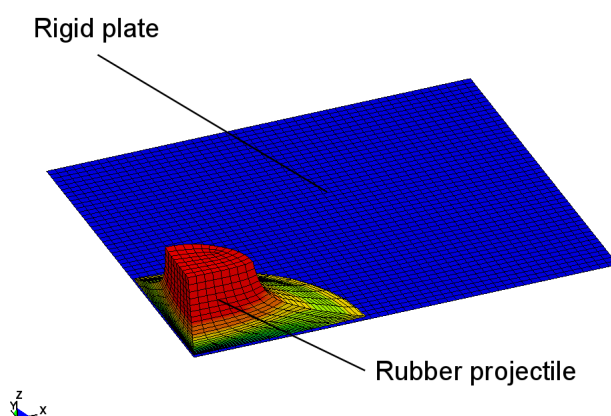


Figure 1: FEA model: Rubber Projectile Impacting a Rigid Plate

The rubber projectile is modelled via a lagrangian approach with solid elements and the rigid plate is modelled with shell elements. A summary of the model set-up can be found in table 2.

Physical Model Information	
plate geometry	20"x20"
plate material	rigid
projectile geometry	length = 5" , radius = 1.5"
projectile material	Gelatin
projectile velocity	2800 in/s

Table 2: Model set-up data

3.3 Model Description

The model geometry is discretized with solid elements for the projectile and shell elements for the rigid plate. See table 3 for the number of elements and material specifications for the model. Employing symmetry conditions, a quarter model of the actual geometry is used. Symmetry boundary conditions are applied on the symmetry planes and the outer edges of the rigid plate are simply supported. The projectile has an initial z velocity defined on all nodes and is guided along the z axis by boundary conditions applied in the x and y directions on the symmetry plane.

FEA Model information	
Nodes	9793
Solid elements	1500
Solid materials	1
Shell elements	2500
Shell materials	1
Parts	2
Plate geometry	10"x10"
Projectile geometry	length = 5" , radius = 1.5"
Units	in (length), s (time), lbf-s ² /in (mass), psi (stress), lbf-in (energy)

Table 3: FEA Model Information

Two variations (called sub test cases) of the model are set up with different force versus actual change in gauge length curves for different strain rates (see figure 2 and 3 for details). A summary of these two sub test cases can be found in table 4.

The material definitions and their parameters can be found in the input decks.

Sub Test ID	MATERIAL	Parameter Curve	Input Deck Name
1	MAT_181	see figure 2	5-rate-curve-atan-ten-tan-unload2.k
2	MAT_181	see figure 3	5-rate-new-curves.k

Table 4: Specification of sub test cases

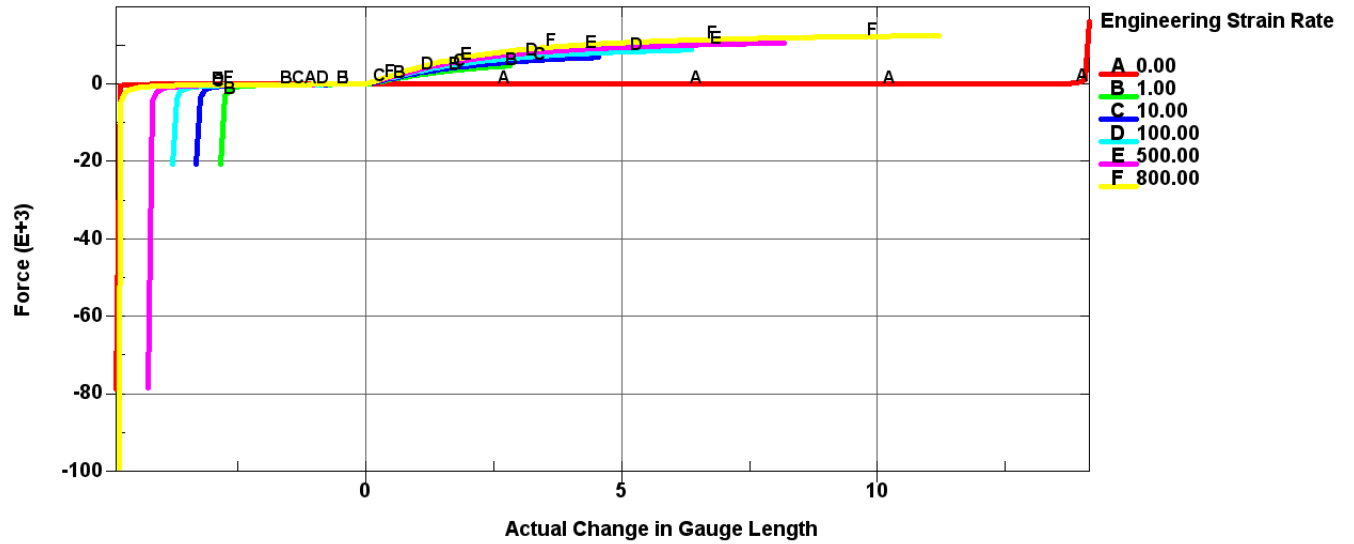


Figure 2: Force versus actual change in gauge length for different engineering strain rates for sub case 1

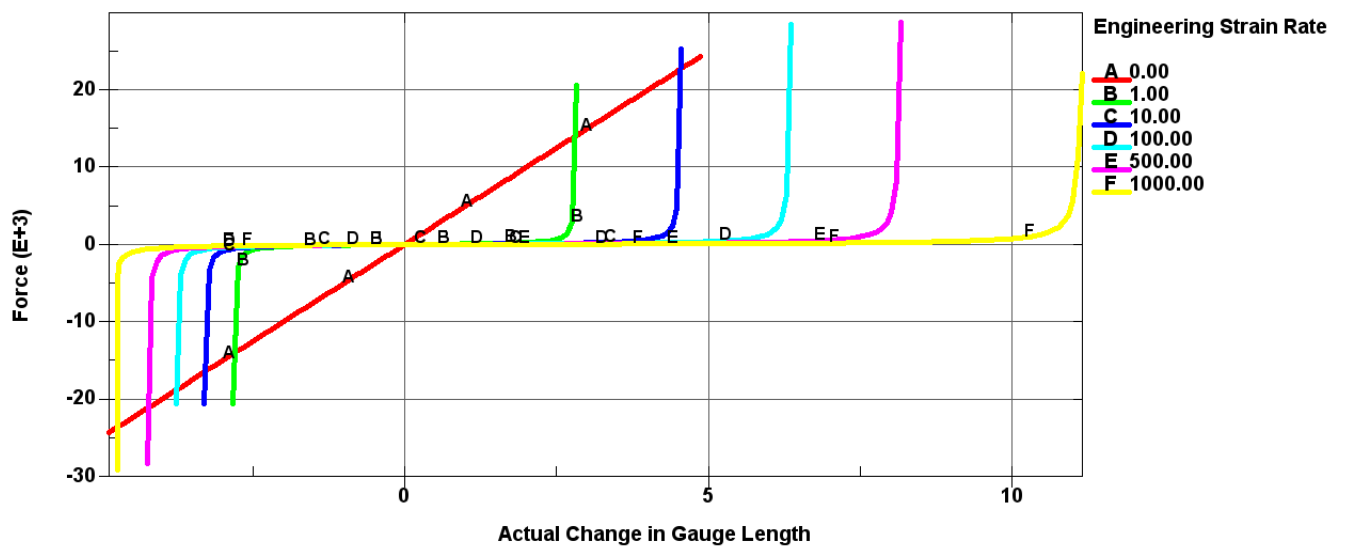


Figure 3: Force versus actual change in gauge length for different engineering strain rates for sub case 2

4 Test Specifications

4.1 Test Case Targets

Table 5 displays the test case targets. The test case targets specify values or a series of values taken from the finite element analysis solution of the test case and they are used in a comparison of analysis results on different cpu architectures. They are chosen in a way that they are representative of the numerical model.

Test Case Targets				
Target number	output	component type	component id	retrieved from
1	z-displacement	node	1	binout/nodout file
2	x-displacement	node	9	binout/nodout file
3	z-displacement	node	9	binout/nodout file
4	x-displacement	node	2982	binout/nodout file
5	y-displacement	node	2982	binout/nodout file
6	z-displacement	node	2982	binout/nodout file
7	z-displacement	node	6654	binout/nodout file
8	kinetic energy	global	-	binout/glstat file
9	internal energy	global	-	binout/glstat file
10	hourglass energy	global	-	binout/glstat file

Table 5: Test Case targets for Test Case ID AWG-ERIF-3

The location of the nodes for target number 1 to 7 can be derived from figure 4. The targets are used to evaluate the cross cpu architecture consistency of the model (see section 4.2).

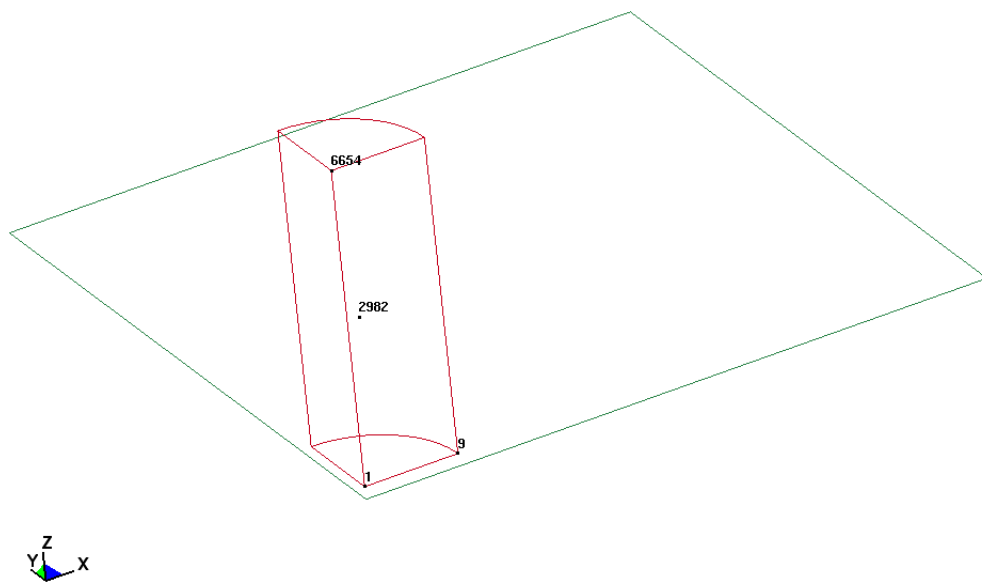


Figure 4: Location of target nodes

4.2 Pass/Fail Criteria

These are the Pass/Fail criteria used for the cross cpu architecture consistency test of the Test Case ID AWG-ERIF-3.

The sub test case passes if the test case target data falls within the corridor bounds. Otherwise the test fails.

The test case corridors are upper and lower bounds for the test case targets. They were defined based on the test target data obtained with LS-DYNA® R9.0 Revision 108899 binaries by the following process:

- For a specific test case target, interpolate the data from different platform and executable (R9.0 Revision 108899) combinations, so that the time domain is the same.
- Calculate the upper and lower bounds by:

$$bound_{up}(i) = max(i) + 0.2 \times [max(i) - min(i)] + 0.05 \times peak$$

$$bound_{low}(i) = min(i) - 0.2 \times [max(i) - min(i)] - 0.05 \times peak$$

where $max(i)$, $min(i)$ are the maximum and minimum values at the i_{th} time step across all platforms and executable (R9.0 Revision 108899) combinations the test case was calculated with, $peak$ is the maximum absolute y value across the whole time domain, $bound_{up}(i)$ and $bound_{low}(i)$ are the upper and lower bounds for the i_{th} time step.

5 Test Case Results

5.1 Software and Hardware Specifications

In order to ensure cross-platform consistency, the herein mentioned sub test cases are run on platforms specified in table 6 and the results are calculated with software versions defined in table 7.

Platform Name	Operating system	CPU type	MPI-Protocol	Number of cpu's ¹
mars	CentOS 6.5	Intel® Xeon® E5- 2640 @ 2.50GHz	Platform MPI 8.2.0.0	4
dinar3b	SUSE LES 11	AMD® Opteron® 6276 @ 2300MHz	Platform MPI 8.2.0.0	4

¹ Number of cpu's used for calculation of the test case

² SGI PROPACK 4

Table 6: Used Platforms and CPU Type's

Product	Version	Release	Revision	Parallel type ¹	Precision ²	executable
LS-DYNA®	971	R11.0	130010	SMP	SP	ls971.130010.R11.0
LS-DYNA®	971	R11.0	130010	SMP	DP	ld971.130010.R11.0
LS-DYNA®	971	R11.0	130010	MPP	SP	mpp971.130010.R11.0
LS-DYNA®	971	R11.0	130010	MPP	DP	mpd971.130010.R11.0

¹ MPP = Massively Parallel Processing, SMP = Symmetric Multiprocessing

² SP = single precision, DP = double precision

Table 7: Tested LS-DYNA® version

5.2 Results Summary

Table 8 contains the results of the Test Case ID AWG-ERIF-3 completed with all combinations of software and hardware defined in section 5.1 (2 * 4 * 3 total calculation runs).

Details on the test results can be found in the section 5.3.

The table 8 cross cpu architecture consistency summary is:

- **PASS** - Pass criteria in section 4.2 is attained.
- **FAILED** - Pass criteria in section 4.2 is not attained.
- **ERROR** - sub test case terminates due to error.
- **N/A** - sub test case was not calculated.

Sub Test ID	PASS/FAILED
1	PASS
2	PASS

Table 8: Cross cpu architecture results summary for Test Case ID AWG-ERIF-3

5.3 Result Details

The following subsections contain detailed results for the Test Case ID AWG-ERIF-3 for LS-DYNA® R11.0 Revision 130010.

For each sub test case defined in section 3.3 there is a graph displaying the time history of the result target defined in section 4.1 for the platform and software version combinations defined in section 5.1.

The title of the graph states the test case ID and the name of input deck. The legend contains the result file name, output, platform, executable and number of cpu's separated by comma. A minus sign before the number of cpu's refers to the compatibility option for SMP calculations (see [1] for details on this option).

Example for title and legend:

Title:

'AWG_ERIF_TEST_CASE_3: 5-rate-curve-atan-ten-tan-unload2.k' states the test case ID 3 and name of the input deck for sub test case 1.

Legend:

'glstat_internal.energy,ham,ls971.130010.R11.0,4' states that the graph shows the internal energy derived from the 'glstat' output file for an input deck which was calculated on the 'ham' platform with a LS-DYNA® R11.0 Revision 130010 binary (SMP, single precision) on four processors.

5.3.1 Sub Test Case ID 1 - Test Target 1

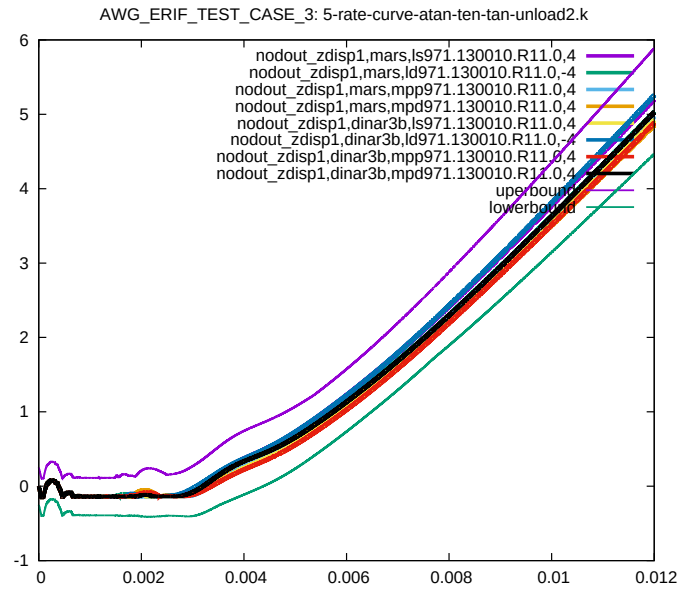


Figure 5: Cross platform results, z-displacement node 1, sub test case ID 1

5.3.2 Sub Test Case ID 1 - Test Target 2

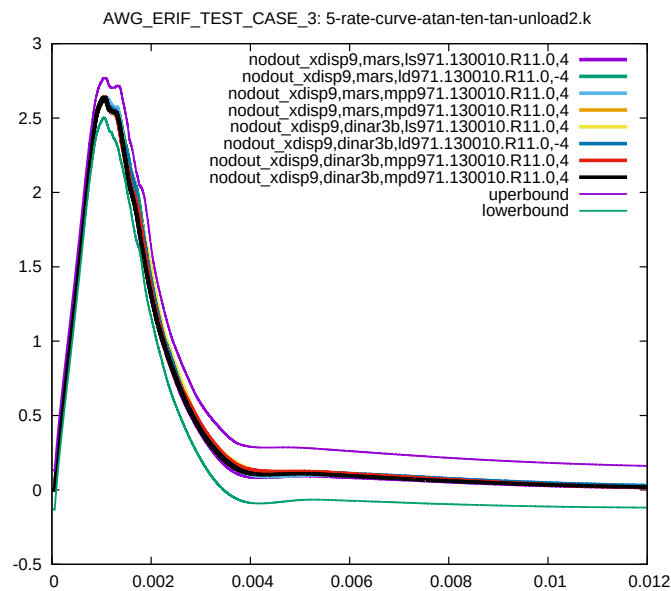


Figure 6: Cross platform results, x-displacement node 9, sub test case ID 1

5.3.3 Sub Test Case ID 1 - Test Target 3

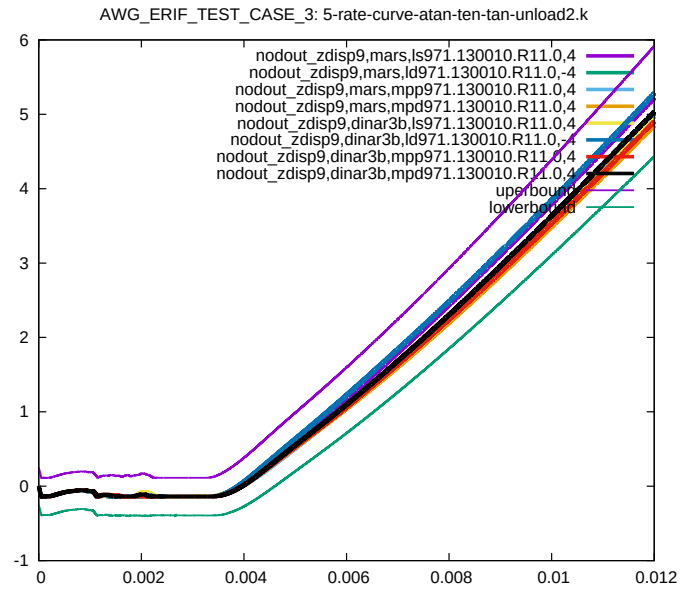


Figure 7: Cross platform results, z-displacement node 9, sub test case ID 1

5.3.4 Sub Test Case ID 1 - Test Target 4

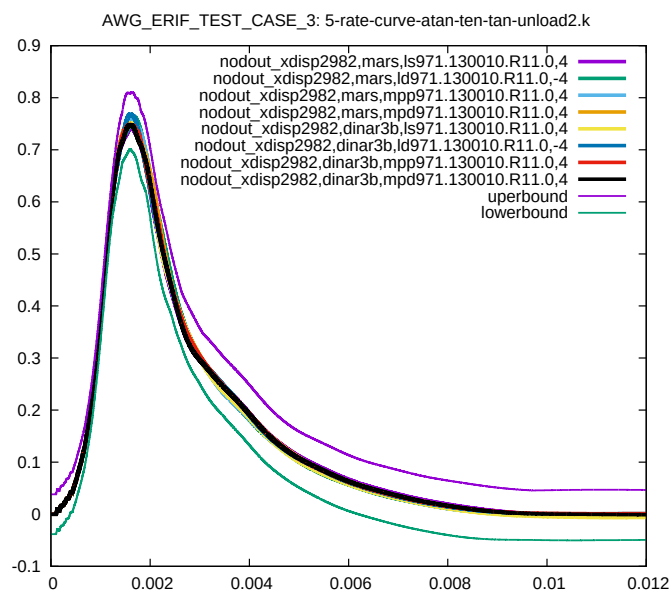


Figure 8: Cross platform results, x-displacement node 2982, sub test case ID 1

5.3.5 Sub Test Case ID 1 - Test Target 5

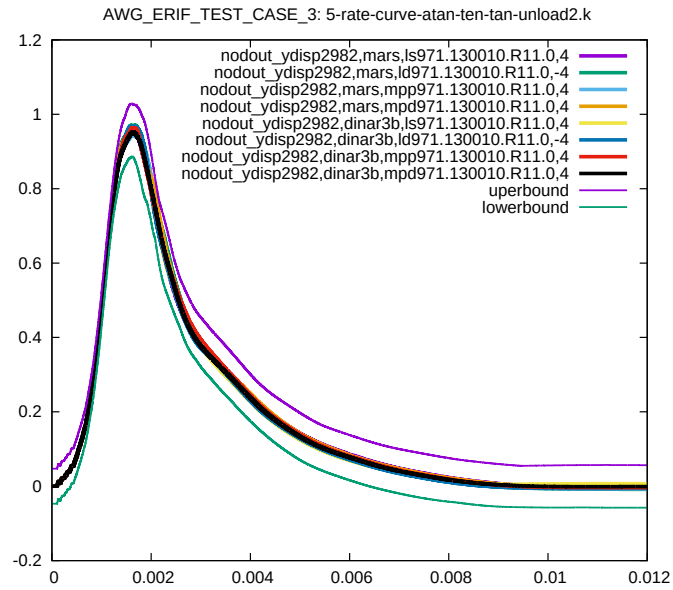


Figure 9: Cross platform results, y-displacement node 2982, sub test case ID 1

5.3.6 Sub Test Case ID 1 - Test Target 6

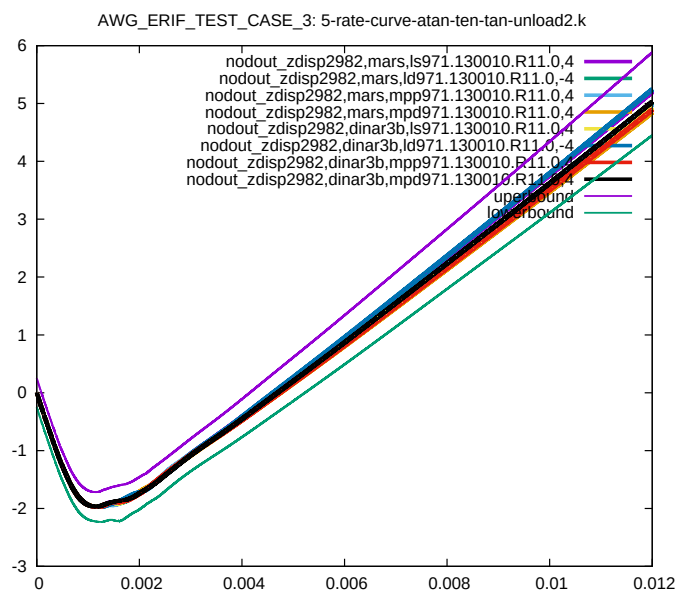


Figure 10: Cross platform results, z-displacement node 2982, sub test case ID 1

5.3.7 Sub Test Case ID 1 - Test Target 7

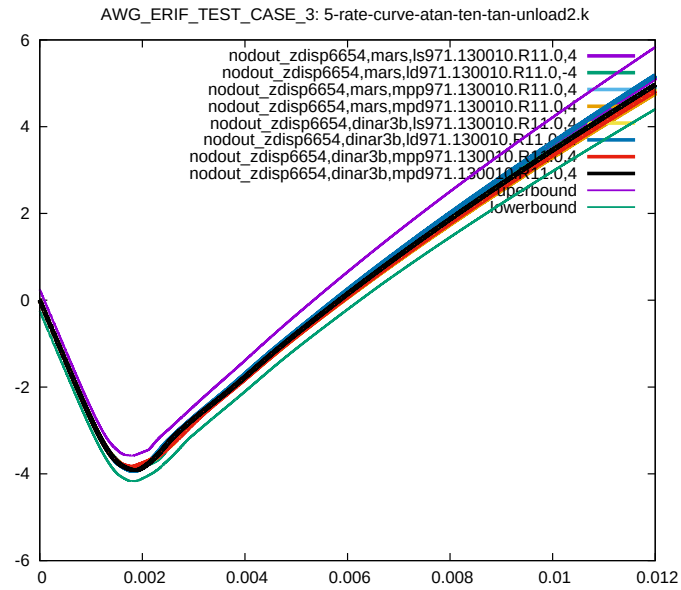


Figure 11: Cross platform results, z-displacement node 6654, sub test case ID 1

5.3.8 Sub Test Case ID 1 - Test Target 8

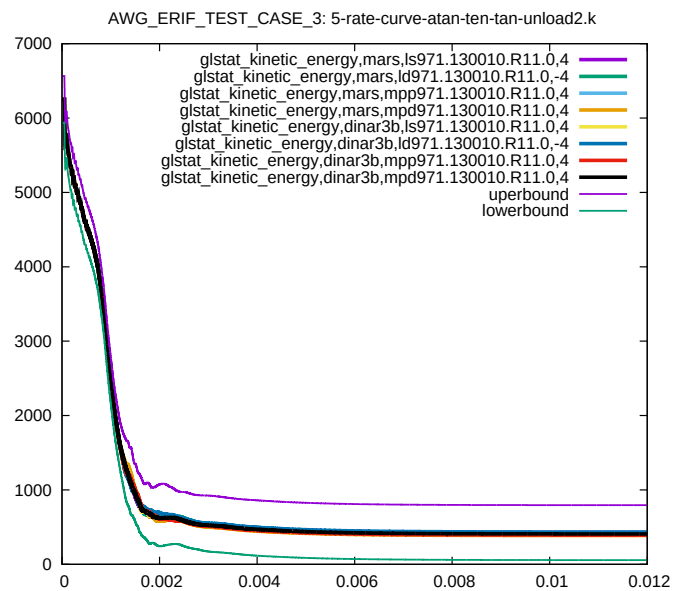


Figure 12: Cross platform results, global kinetic energy, sub test case ID 1

5.3.9 Sub Test Case ID 1 - Test Target 9

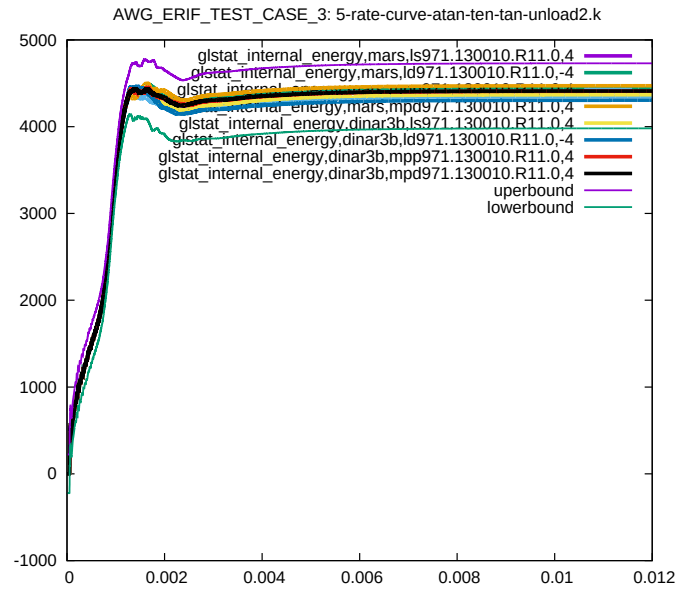


Figure 13: Cross platform results, global internal energy, sub test case ID 1

5.3.10 Sub Test Case ID 1 - Test Target 10

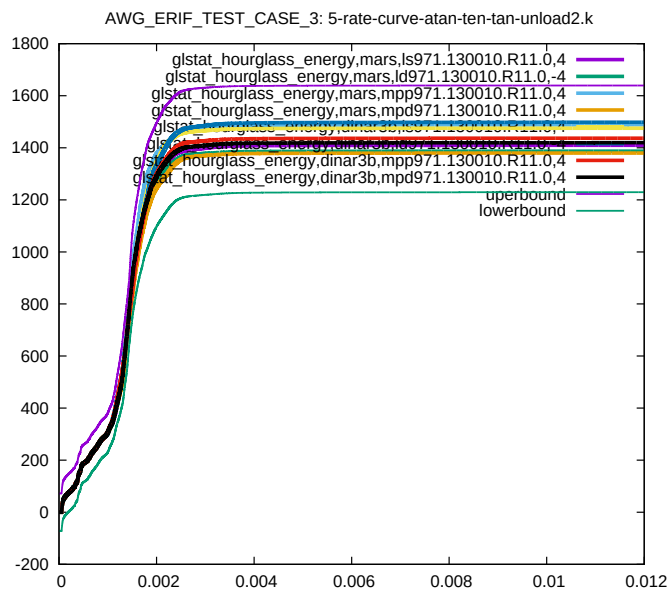


Figure 14: Cross platform results, global hourglass energy, sub test case ID 1

5.3.11 Sub Test Case ID 2 - Test Target 1

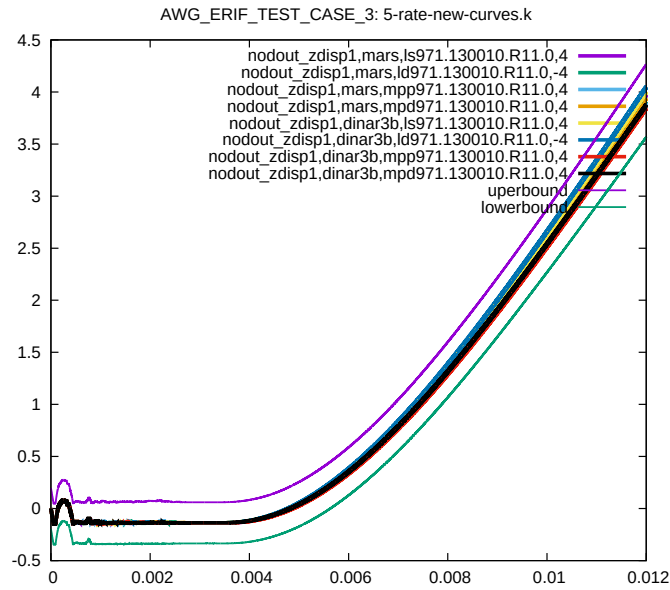


Figure 15: Cross platform results, z-displacement node 1, sub test case ID 2

5.3.12 Sub Test Case ID 2 - Test Target 2

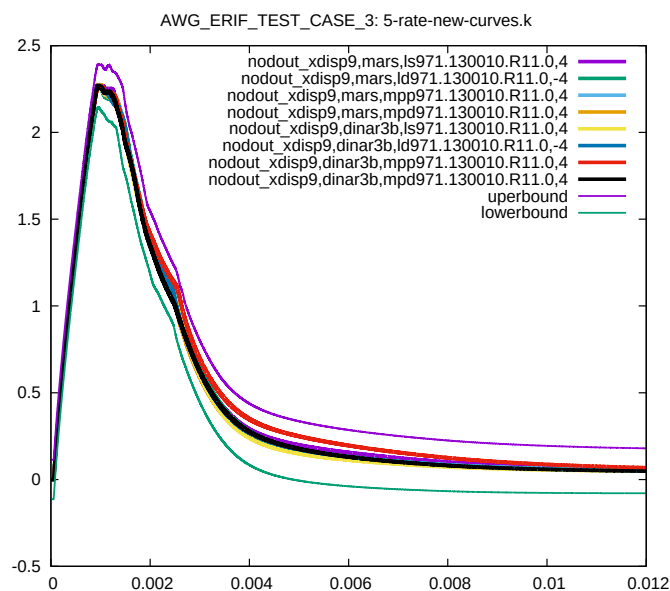


Figure 16: Cross platform results, x-displacement node 9, sub test case ID 2

5.3.13 Sub Test Case ID 2 - Test Target 3

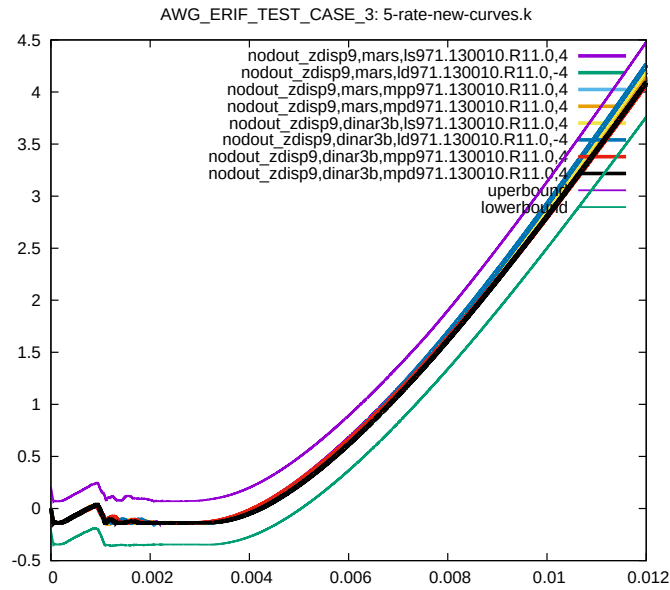


Figure 17: Cross platform results, z-displacement node 9, sub test case ID 2

5.3.14 Sub Test Case ID 2 - Test Target 4

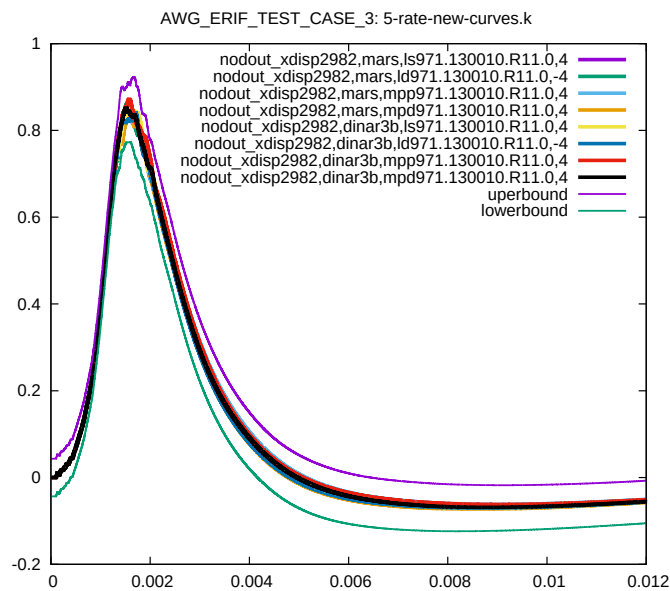


Figure 18: Cross platform results, x-displacement node 2982, sub test case ID 2

5.3.15 Sub Test Case ID 2 - Test Target 5

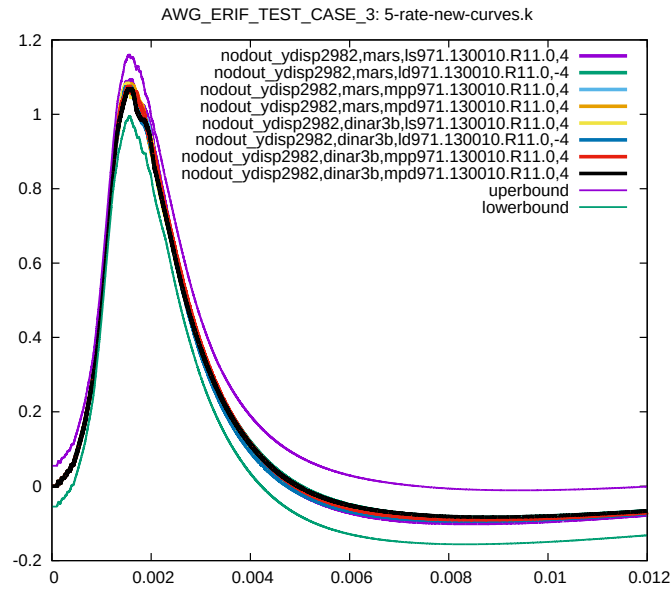


Figure 19: Cross platform results, y-displacement node 2982, sub test case ID 2

5.3.16 Sub Test Case ID 2 - Test Target 6

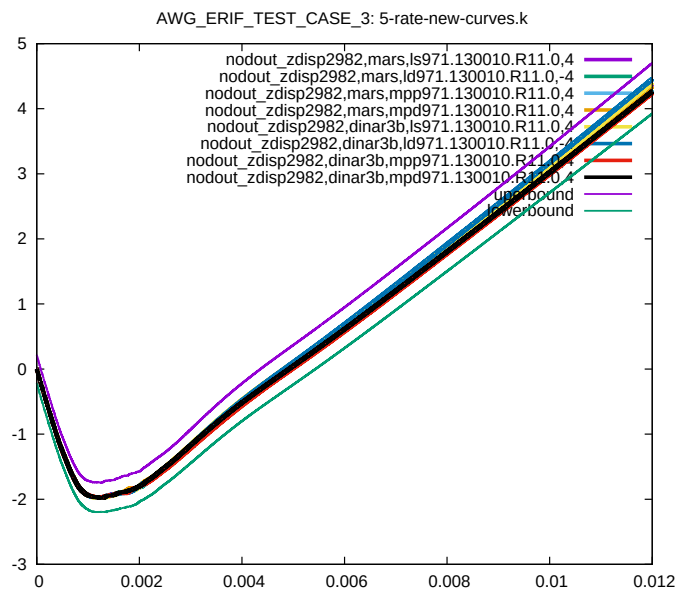


Figure 20: Cross platform results, z-displacement node 2982, sub test case ID 2

5.3.17 Sub Test Case ID 2 - Test Target 7

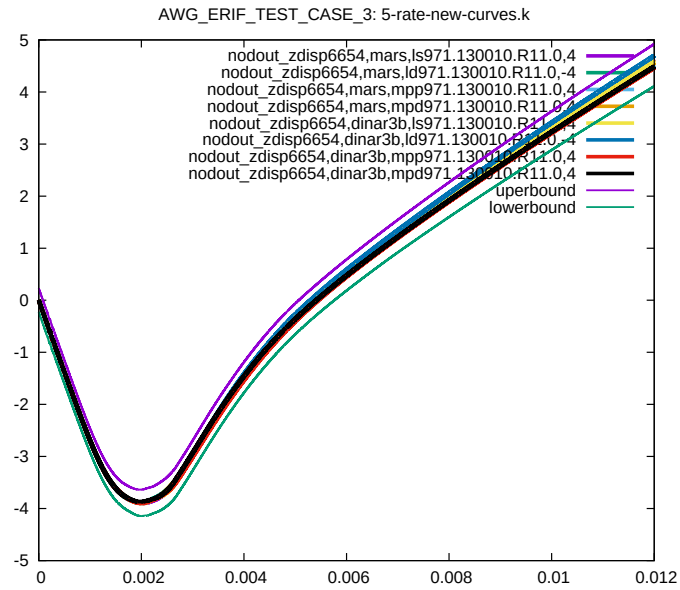


Figure 21: Cross platform results, z-displacement node 6654, sub test case ID 2

5.3.18 Sub Test Case ID 2 - Test Target 8

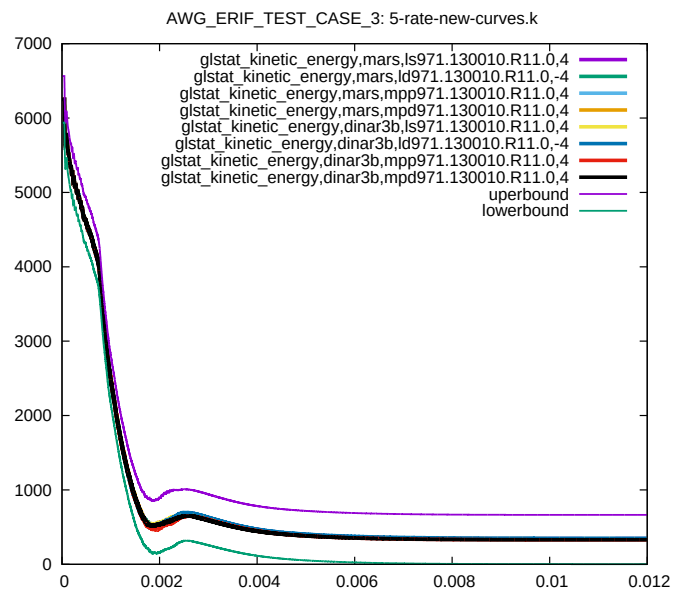


Figure 22: Cross platform results, global kinetic energy, sub test case ID 2

5.3.19 Sub Test Case ID 2 - Test Target 9

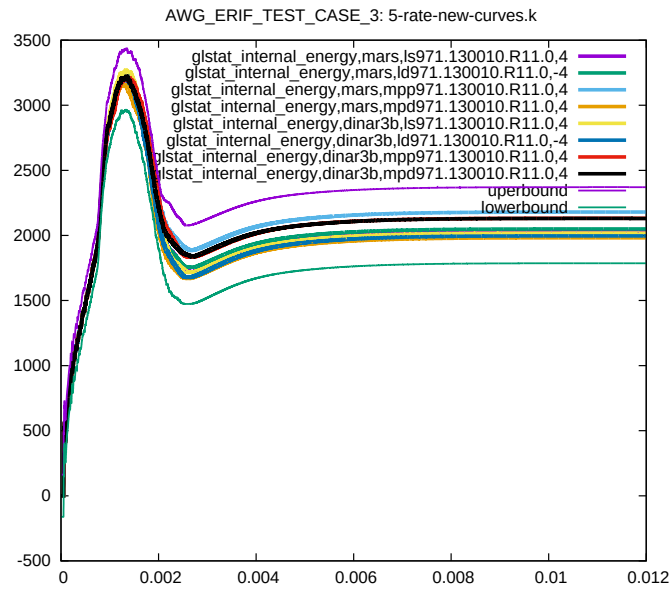


Figure 23: Cross platform results, global internal energy, sub test case ID 2

5.3.20 Sub Test Case ID 2 - Test Target 10

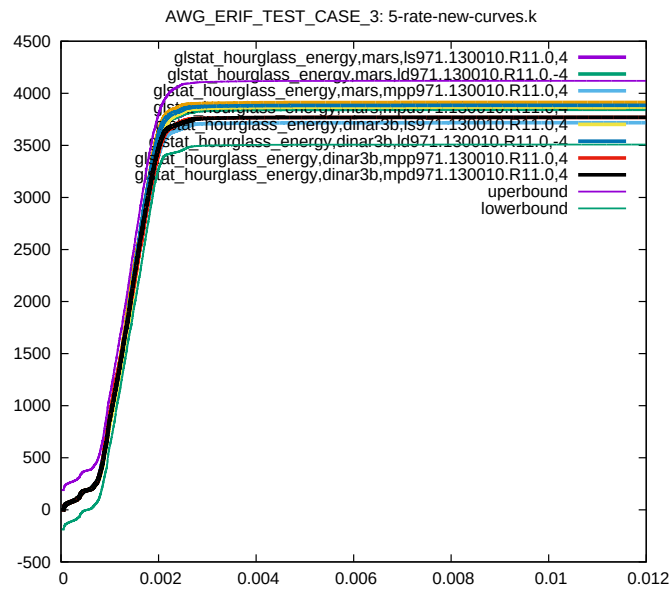


Figure 24: Cross platform results, global hourglass energy, sub test case ID 2

References

- [1] LSTC, *LS-DYNA KEYWORD USER MANUAL*, 7374 Las Positas Road, Livermore, CA, 94551, USA, version 971 ed., May 2007.