

TEST CASE DOCUMENTATION AND TESTING RESULTS

LSTC-QA-LS-DYNA-AWG-ERIF-14-10

TEST CASE ID AWG-ERIF-14

*ELEMENT_BEARING

Tested with LS-DYNA® R11.2 Revision 26-gd2ace36

Wednesday 2nd December, 2020

Warranty Disclaimer:

The test case(s) described herein are for illustrative purposes only. LSTC does not warrant that a user of these or other LS-DYNA features will experience the same or similar results or that a feature will meet the user's particular requirements or operate error free. FURTHERMORE, THERE ARE NO WARRANTIES, EITHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, WITH RESPECT TO THE DOCUMENTATION AND SOFTWARE DESCRIBED HEREIN INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES (i) OF MERCHANTABILITY, OR (ii) FITNESS FOR A PARTICULAR PURPOSES, OR (iii) ARISING FROM COURSE OF PERFORMANCE OR DEALING, OR FROM USAGE OF TRADE OR. THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER REMEDIES FOR BREACH OF WARRANTY.

Document Information	
Confidentiality	external use
Document Identifier	LSTC-QA-LS-DYNA-AWG-ERIF-14-10
Author(s)	Prepared by LS-DYNA® Aerospace Working Group
Number of pages	12
Date created	Wednesday 2 nd December, 2020
Distribution	LS-DYNA® Aerospace Working Group / internal LSTC QA

Contents

1	Introduction	1
1.1	Purpose of this Document	1
2	Test Case Information	2
3	Test Case Specification	3
3.1	Test Case Purpose	3
3.2	Test Case Description	4
3.3	Model Description	5
4	Test Specifications	6
4.1	Test Case Targets	6
4.2	Pass/Fail Criteria	6
5	Test Case Results	7
5.1	Software and Hardware Specifications	7
5.2	Results Summary	8
5.3	Result Details	9
5.3.1	Sub Test Case ID 1 - Test Target 1	10
5.3.2	Sub Test Case ID 2 - Test Target 2	11
	References	12

1 Introduction

1.1 Purpose of this Document

The purpose of this test case is the demonstration of the *ELEMENT_BEARING feature in LS-DYNA® for a spinning beam element shaft. The reliability and consistency of LS-DYNA® as a finite element solver for this test case is evaluated by performing analyses on different cpu architecture platforms.

2 Test Case Information

Test Case Summary	
Confidentiality	external use
Test Case Name	*ELEMENT_BEARING
Test Case ID	AWG-ERIF-14
Test Case Status	active
Test Case Classification	Example
Test Case Source	LSTC
Tested Keyword	*ELEMENT_BEARING
Member of Test Suite	AWG ERIF SUITE
Metadata	AWG ERIF

Table 1: Test Case Summary

3 Test Case Specification

3.1 Test Case Purpose

The purpose of Test Case ID AWG-ERIF-14 is the comparison of results from different cpu architectures for a test case containing *ELEMENT.BEARING keyword.

The reliability and consistency of LS-DYNA® as a finite element solver for these test cases is evaluated by performing analyses on different cpu architecture platforms.

3.2 Test Case Description

This Test Case consists of a spinning steel shaft made of beam elements with a center concentrated eccentric mass. The shaft has the translations fixed at one end of the beam and the other end of the shaft is supported by an *ELEMENT_BEARING that includes a preload.

Table 2 provides a short summary of the physical model setup.

Physical Model Information	
Steel Shaft	
Shaft Length	1.0 m
Shaft outer radius	0.05 m
Shaft inner radius	0.047 m
Center concentrated mass	10 kg
Concentrated mass eccentricity	4E-4 m
Steel Bearings	
Number of balls	14
Young's Modulus for balls (EBALL)	206.9E9 N/m
Poisson's Ratio for balls (PRBALL)	0.3
Young's Modulus for race (ERACE)	206.9E9 N/m
Poisson's Ratio for race (PRRACE)	0.3
Diameter of balls (D)	0.0127 m
Bore inner diameter (DI)	0.05 m
Bore outer diameter (DO)	0.09 m
Pitch Diameter (DM)	0.07 m (average of inner and outer bore diameter)
Unloaded, initial contact angle (A0)	15 °
Inner race groove radius to ball diameter ratio (BI)	0.54
Outer race groove radius to ball diameter ratio (BO)	0.54
Unloaded bearing clearance (PD)	0.0
Force preload in local x-direction (XTRAN)	600 N
Force preload in local y-direction (YTRAN)	600 N
Force preload in local z-direction (ZTRAN)	500 N
Moment preload in local x-direction (XROT)	0.435 N-m
Moment preload in local y-direction (YROT)	0.435 N-m

Table 2: Physical Model Information

3.3 Model Description

The model consists of a spinning hollow shaft consisting of 10 beam elements. A 10 kg concentrated mass is located at the center of the shaft with a 4E-4 m eccentricity. The shaft rotational velocity is ramped up to 1000 rad/sec. The model specifications can be found in Table 3 and Table 4 provides the sub test case specification. The material definitions and their parameters can be found in the input deck.

FEA Model information	
Nodes	16
Beam Elements	10
Discrete Elements	1
Bearing Elements	1
Parts	2
Rotational Velocity	1000 rad/sec
Unit System	in (m), s (time), force (N), mass (kg), stress (N/m ²), energy (N-m)

Table 3: FEA Model Information

Specification of sub test cases	
Test Case ID	Input Deck Name
1	bearing14_shaft_rampup_high.k

Table 4: Specification of sub test cases

4 Test Specifications

4.1 Test Case Targets

Table 5 displays the test case targets. The test case targets specify values or a series of values taken from the finite element analysis solution of the test case and they are used in a comparison of analysis results on different cpu architectures. They are chosen in a way that they are representative of the numerical model.

Test Case Targets					
Target number	Sub Test Case ID	output	component type	component id	retrieved from
1	1	nodal	x-displacement	1	binout/nodout file
2	1	nodal	y-displacement	1	binout/nodout file

Table 5: Test Case targets for Test Case ID AWG-ERIF-14

Test case targets are used to evaluate the cross cpu architecture consistency (see section 4.2).

4.2 Pass/Fail Criteria

These are the Pass/Fail criteria used for the cross cpu architecture consistency test of the Test Case ID AWG-ERIF-14.

The sub test case passes if the test case target data falls within the corridor bounds. Otherwise the test fails.

The test case corridors are upper and lower bounds for the test case targets. They were defined based on the test target data obtained with LS-DYNA[®] R9.0 Revision 108899 binaries by the following process:

- For a specific test case target, interpolate the data from different platform and executable (R9.0 Revision 108899) combinations, so that the time domain is the same.
- Calculate the upper and lower bounds by:

$$bound_{up}(i) = max(i) + 0.2 \times [max(i) - min(i)] + 0.05 \times peak$$

$$bound_{low}(i) = min(i) - 0.2 \times [max(i) - min(i)] - 0.05 \times peak$$

where $max(i)$, $min(i)$ are the maximum and minimum values at the i_{th} time step across all platforms and executable (R9.0 Revision 108899) combinations the test case was calculated with, $peak$ is the maximum absolute y value across the whole time domain, $bound_{up}(i)$ and $bound_{low}(i)$ are the upper and lower bounds for the i_{th} time step.

5 Test Case Results

5.1 Software and Hardware Specifications

In order to ensure cross-platform consistency, the herein mentioned sub test cases are run on platforms specified in table 6 and the results are calculated with software versions defined in table 7.

Platform Name	Operating system	CPU type	MPI-Protocol	Number of cpu's ¹
mars	CentOS 6.5	Intel® Xeon® E5- 2640 @ 2.50GHz	Platform MPI 8.2.0.0	4
dinar3b	SUSE LES 11	AMD® Opteron® 6276 @ 2300MHz	Platform MPI 8.2.0.0	4

¹ Number of cpu's used for calculation of the test case

Table 6: Used Platforms and CPU Type's

Product	Version	Release	Revision	Parallel type ¹	Precision ²	executable
LS-DYNA®	971	R11.2	26-gd2ace36	SMP	SP	ls971.26-gd2ace36.R11.2
LS-DYNA®	971	R11.2	26-gd2ace36	SMP	DP	ld971.26-gd2ace36.R11.2
LS-DYNA®	971	R11.2	26-gd2ace36	MPP	SP	mpp971.26-gd2ace36.R11.2
LS-DYNA®	971	R11.2	26-gd2ace36	MPP	DP	mpd971.26-gd2ace36.R11.2

¹ MPP = Massively Parallel Processing, SMP = Symmetric Multiprocessing

² SP = single precision, DP = double precision

Table 7: Tested LS-DYNA® version

5.2 Results Summary

Table 8 contains the results of the Test Case ID AWG-ERIF-14 completed with all combinations of software and hardware defined in section 5.1 (1 * 3 * 4 total calculation runs).

Details on the test results can be found in the section 5.3.

The table 8 cross cpu architecture consistency summary is:

- **PASS** - Pass criteria in section 4.2 is attained.
- **FAILED** - Pass criteria in section 4.2 is not attained.
- **ERROR** - sub test case terminates due to error.
- **N/A** - sub test case was not calculated.

Sub Test Case ID	PASS/FAILED
1	PASS

Table 8: Results summary for Test Case ID AWG-ERIF-14

5.3 Result Details

The following subsections contain detailed results for the Test Case ID AWG-ERIF-14 for LS-DYNA® R11.2 Revision 26-gd2ace36.

For each sub test case defined in section 3.3 there is a graph displaying the time history of the result target defined in section 4.1 for the platform and software version combinations defined in section 5.1.

The title of the graph states the test case ID and the name of input deck. The legend contains the result file name, output, platform, executable and number of cpu's separated by comma. A minus sign before the number of cpu's refers to the compatibility option for SMP calculations (see [1] for details on this option).

Example for title and legend:

Title:

'AWG_ERIF_TEST_CASE_14: bearing14_shaft_rampup_high.k' states the test case ID 14 and name of the input deck for sub test case 1.

Legend:

'glstat_internal.energy,ham,ls971.26-gd2ace36.R11.2,4' states that the graph shows the internal energy derived from the 'glstat' output file for an input deck which was calculated on the 'ham' platform with a LS-DYNA® R11.2 Revision 26-gd2ace36 binary (SMP, single precision) on four processors.

5.3.1 Sub Test Case ID 1 - Test Target 1

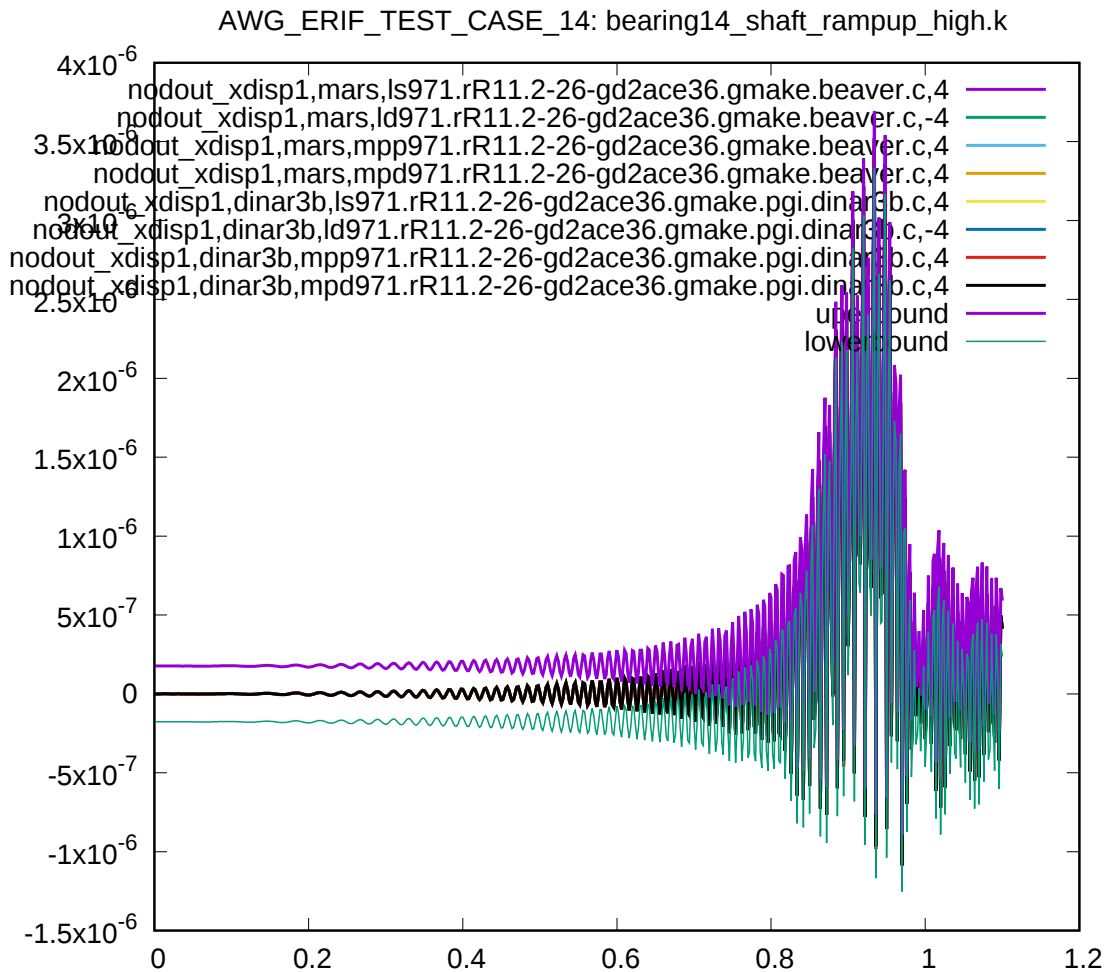


Figure 1: Cross platform results, node displacement in x-direction, node id 1, sub test case ID 1

5.3.2 Sub Test Case ID 2 - Test Target 2

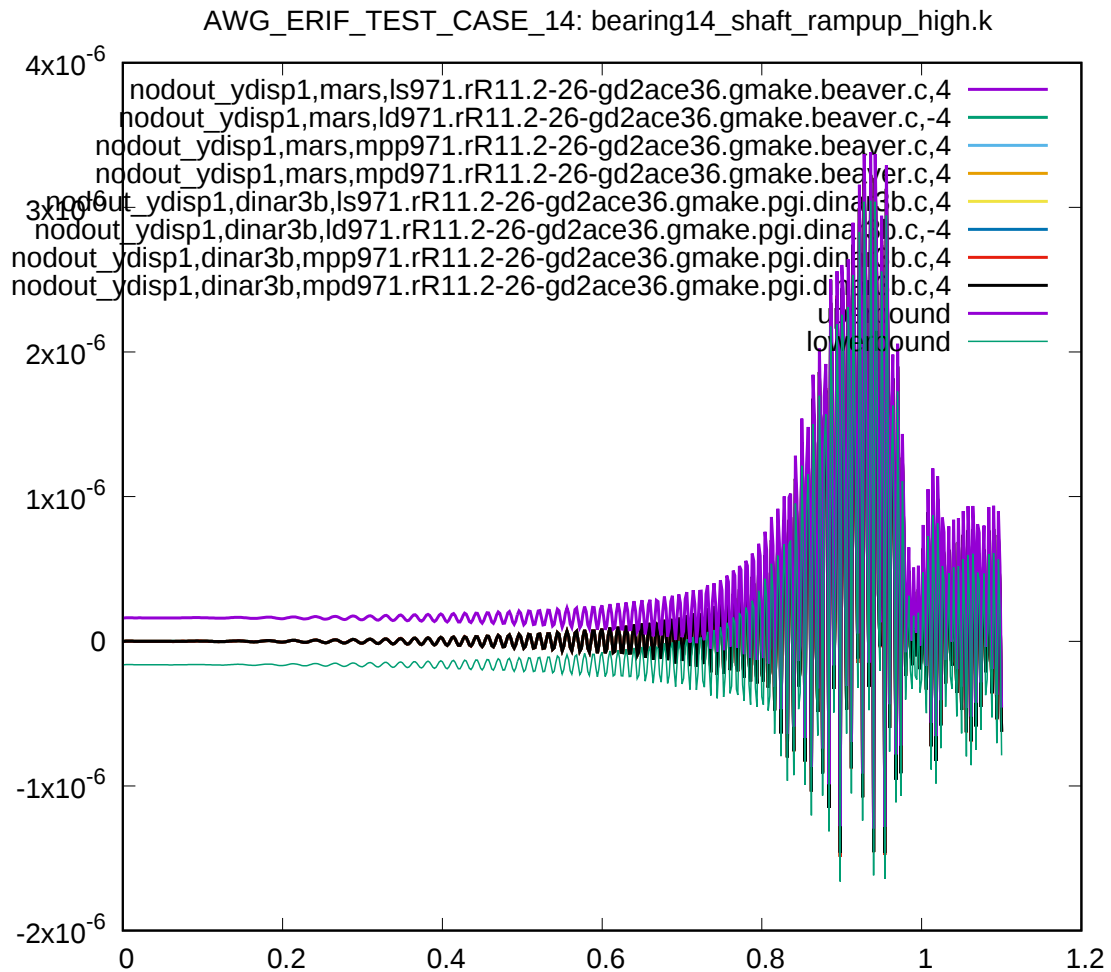


Figure 2: Cross platform results, node displacement in y-direction, node id 1, sub test case ID 1

References

- [1] LSTC, *LS-DYNA KEYWORD USER MANUAL*, 7374 Las Positas Road, Livermore, CA, 94551, USA, version 971 ed., May 2007.