

TEST CASE DOCUMENTATION AND TESTING RESULTS

ANSYS-QA-LS-DYNA-AWG-CI-6-5

TEST CASE ID AWG-CI-6

Tension Member - Aft Seat Leg, Tension
Bar

Tested with LS-DYNA® R14.0 Revision 114-gae4816ef53

Friday 5th August, 2022



Warranty Disclaimer:

The test case(s) described herein are for illustrative purposes only. ANSYS does not warrant that a user of these or other LS-DYNA features will experience the same or similar results or that a feature will meet the user's particular requirements or operate error free. FURTHERMORE, THERE ARE NO WARRANTIES, EITHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, WITH RESPECT TO THE DOCUMENTATION AND SOFTWARE DESCRIBED HEREIN INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES (i) OF MERCHANTABILITY, OR (ii) FITNESS FOR A PARTICULAR PURPOSES, OR (iii) ARISING FROM COURSE OF PERFORMANCE OR DEALING, OR FROM USAGE OF TRADE OR. THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER REMEDIES FOR BREACH OF WARRANTY.

Document Information	
Confidentiality	external use
Document Identifier	ANSYS-QA-LS-DYNA-AWG-CI-6-5
Author(s)	Prepared by LS-DYNA® Aerospace Working Group
Number of pages	14
Date created	Friday 5 th August, 2022
Distribution	LS-DYNA® Aerospace Working Group / internal ANSYS QA

Contents

1	Introduction	1
1.1	Purpose of this Document	1
2	Test Case Information	2
3	Test Case Specification	3
3.1	Test Case Purpose	3
3.2	Test Case Description	4
3.3	Model Description	5
4	Test Specifications	6
4.1	Test Case Targets	6
4.2	Pass/Fail Criteria	7
5	Test Case Results	8
5.1	Software and Hardware Specifications	8
5.2	Results Summary	9
5.3	Result Details	10
5.3.1	Test Target 1: X-component Displacement	11
5.3.2	Test Target 2: Internal Energy	12
5.3.3	Test Target 3: CPU time	13
	References	14

1 Introduction

1.1 Purpose of this Document

This document specifies the test case AWG-CI-6. It provides general test case information like name and ID as well as information to the confidentiality, status, and classification of the test case.

A detailed description of the test case is given, the purpose of the test case is defined, and the tested features are named. The test case specifications also state the target measures for testing and the expected results, as well as their pass and fail criteria.

Testing results are provided in section 5 for the therein mentioned LS-DYNA® version and platforms.

2 Test Case Information

Test Case Summary	
Confidentiality	external use
Test Case Name	Tension Member - Aft Seat Leg, Tension Bar
Test Case ID	AWG-CI-6
Test Case Status	active
Test Case Classification	Application Benchmark
Test Case Source	Boeing
Tested Keyword	*ELEMENT_SOLID *MAT_ELASTC
Member of Test Suite	AWG CI SUITE
Metadata	AWG CI

Table 1: Test Case Summary

3 Test Case Specification

3.1 Test Case Purpose

The purpose of Test Case ID AWG-CI-6 is to simulate a tensile load on a rod that is representative of an aft seat leg, tension member or a portion of an actuator that is subjected to tensile, compressive, and compression, bending loads.

3.2 Test Case Description

A pull test scenario is simulated with 0.15 GPa of pressure applied to the free end of a rod that has the other end fixed in all degrees of freedom as shown in Figure 1.

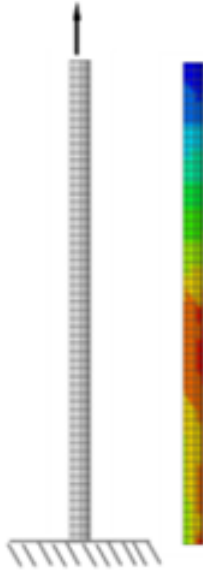


Figure 1: Tension member.

3.3 Model Description

An aluminum (2024-T351) rod with a 228.6 mm (9 inch) length and 12.7 mm (0.5 inch) diameter is fixed at one end in all degrees of freedom as shown in Figure 1. The other end of the rod has a 0.15 GPa pressure applied. Displacement of a node on the free end is monitored along with the internal energy of the rod. The Finite Element Model is shown in Figure 2.

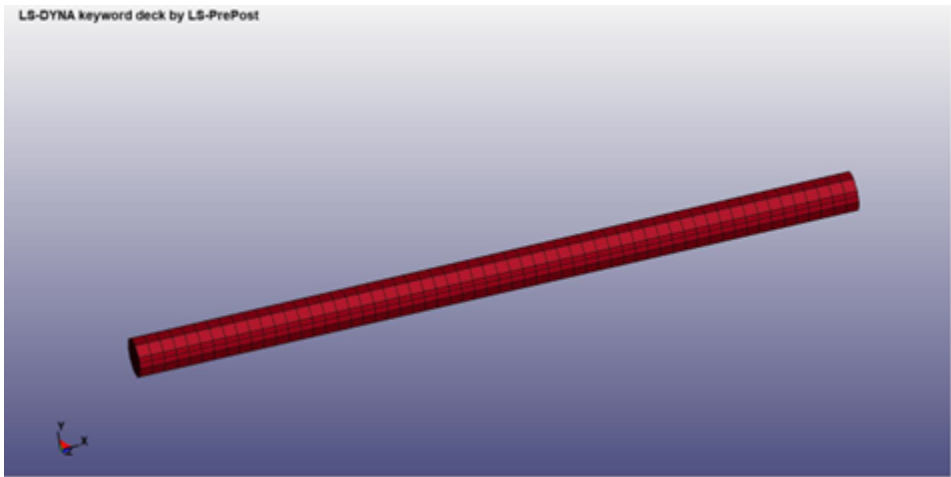


Figure 2: Rod Finite Element Model

Model information	
Nodes	1593
Solid elements	1160
Materials	1
Parts	1
Units	mm (length), ms (time), kg (mass), kN (force,) GPa (stress)

Table 2: FEA Model Information

Model information	
Test Case ID	Input Deck Name
1	tension_bar_aft_seat_leg.key

Table 3: Specification of sub test cases

4 Test Specifications

4.1 Test Case Targets

Test Case Targets				
Target number	output	component type	component id	retrieved from
1	X-component Displacement	Node	1301	binout/nodout file
2	Internal Energy	Part	1	binout/glstat file
3	CPU Time			d3hsp file

Table 4: Test Case targets for Test Case ID AWG-CI-6

4.2 Pass/Fail Criteria

These are the Pass/Fail criteria used for the Validation of the Test Case ID AWG-CI-6.

The sub test case passes if the test case target data falls within the corridor bounds. Otherwise the test fails.

The test case corridors are upper and lower bounds for the test case targets. They were defined based on the test target data obtained with LS-DYNA® R14.0 Revision 114 binaries by the following process:

- For a specific test case target, interpolate the data from different platform and executable (R14.0 Revision 114) combinations, so that the time domain is the same.
- Calculate the upper and lower bounds by:

$$bound_{up}(i) = max(i) + 0.2 \times [max(i) - min(i)] + 0.05 \times peak$$

$$bound_{low}(i) = min(i) - 0.2 \times [max(i) - min(i)] - 0.05 \times peak$$

where $max(i)$, $min(i)$ are the maximum and minimum values at the i_{th} time step across all platforms and executable (R14.0 Revision 114) combinations the test case was calculated with, $peak$ is the maximum absolute y value across the whole time domain, $bound_{up}(i)$ and $bound_{low}(i)$ are the upper and lower bounds for the i_{th} time step.

For CPU Time target, it holds:

$$bound_{up}^{CPU\ Time} = 2 \times Max + 1$$

$$bound_{low}^{CPU\ Time} = 0$$

where Max is the maximum CPU Time (in seconds) across all platforms and executable (R14.0 Revision 114) combinations the test case was calculated with and $bound_{up}^{CPU\ Time}$ and $bound_{low}^{CPU\ Time}$ are the upper and lower bounds.

5 Test Case Results

5.1 Software and Hardware Specifications

In order to ensure cross-platform consistency, the herein mentioned sub test cases are run on platforms specified in table 5 and the results are calculated with software versions defined in table 6.

Platform Name	Operating system	CPU type	MPI-Protocol	Number of cpu's ¹
cougar	CentOS 7.9	Intel® Xeon® E5- 2680 v4 @ 2.40GHz	Platform MPI 09.01.04.03	4

¹ Number of cpu's used for calculation of the test case

Table 5: Used Platforms and CPU Type's

Product	Version	Release	Revision	Parallel type ¹	Precision ²	executable
LS-DYNA®	971	R14.0	114-gae4816ef53	SMP	SP	ls971.114-gae4816ef53.R14.0
LS-DYNA®	971	R14.0	114-gae4816ef53	SMP	DP	ld971.114-gae4816ef53.R14.0
LS-DYNA®	971	R14.0	114-gae4816ef53	MPP	SP	mpp971.114-gae4816ef53.R14.0
LS-DYNA®	971	R14.0	114-gae4816ef53	MPP	DP	mpd971.114-gae4816ef53.R14.0

¹ MPP = Massively Parallel Processing, SMP = Symmetric Multiprocessing

² SP = single precision, DP = double precision

Table 6: Tested LS-DYNA® version

5.2 Results Summary

Table 7 contains the results of the Test Case ID AWG-CI-6 completed with all combinations of software and hardware defined in section 5.1 (1 * 1 * 4 total calculation runs).

Details on the test results can be found in the section 5.3.

The table 7 cross cpu architecture consistency summary is:

- **PASS** - Pass criteria in section 4.2 is attained.
- **FAILED** - Pass criteria in section 4.2 is not attained.
- **ERROR** - sub test case terminates due to error.
- **N/A** - sub test case was not calculated.

Sub Test Case ID	PASS/FAILED
1	PASS

Table 7: Results summary for Test Case ID AWG-CI-6

5.3 Result Details

The following subsections contain detailed results for the Test Case ID AWG-CI-6 for LS-DYNA® R14.0 Revision 114-gae4816ef53.

For each sub test case defined in section 3.3 there is a graph displaying the time history of the result target defined in section 4.1 for the platform and software version combinations defined in section 5.1.

The title of the graph states the test case ID and the name of input deck. The legend contains the type, branch and the revision of the executable.

5.3.1 Test Target 1: X-component Displacement

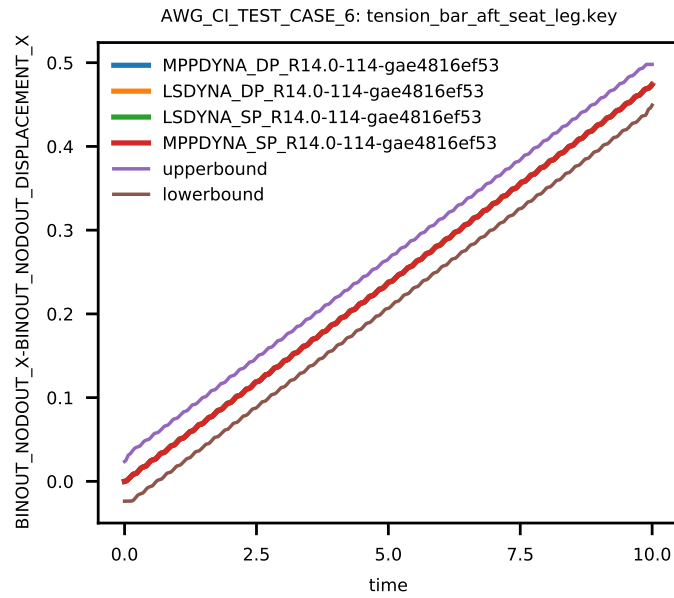


Figure 3: X-component Displacement of Node 1301.

5.3.2 Test Target 2: Internal Energy

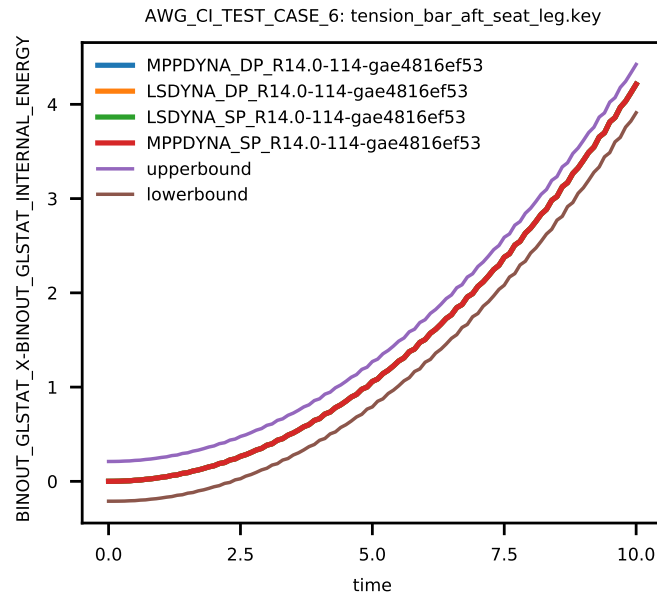


Figure 4: Internal Energy of Part 1.

5.3.3 Test Target 3: CPU time

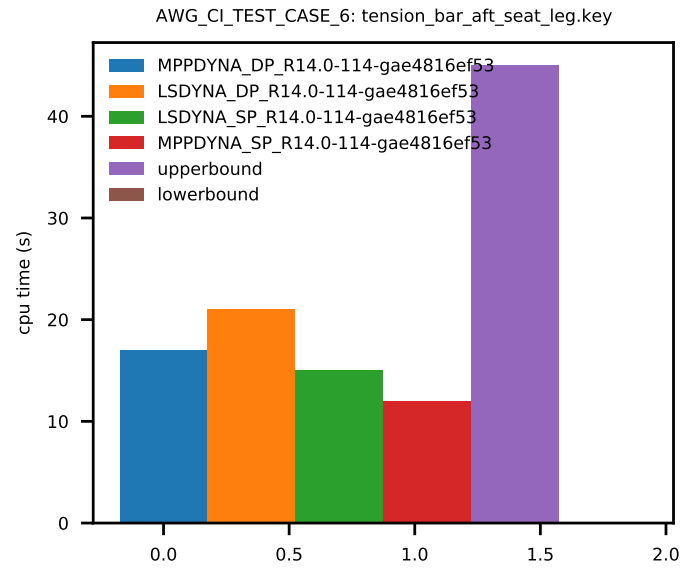


Figure 5: CPU Time Comparison.

References