

TEST CASE DOCUMENTATION AND TESTING RESULTS

LSTC-QA-LS-DYNA-AWG-ERIF-1.1-7

TEST CASE ID AWG-ERIF-1.1

Ballistic Impact:

Ti 6-4 Projectile (solid elements) impacts
a 304L SS plate (shell elements)

Tested with LS-DYNA® R9.0 Revision 108899

Friday 19th August, 2016

Warranty Disclaimer:

The test case(s) described herein are for illustrative purposes only. LSTC does not warrant that a user of these or other LS-DYNA features will experience the same or similar results or that a feature will meet the user's particular requirements or operate error free. FURTHERMORE, THERE ARE NO WARRANTIES, EITHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, WITH RESPECT TO THE DOCUMENTATION AND SOFTWARE DESCRIBED HEREIN INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES (i) OF MERCHANTABILITY, OR (ii) FITNESS FOR A PARTICULAR PURPOSES, OR (iii) ARISING FROM COURSE OF PERFORMANCE OR DEALING, OR FROM USAGE OF TRADE OR. THE REMEDIES SET FORTH HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER REMEDIES FOR BREACH OF WARRANTY.

Document Information

Confidentiality	external use
Document Identifier	LSTC-QA-LS-DYNA-AWG-ERIF-1.1-7
Author(s)	Prepared by LS-DYNA® Aerospace Working Group
Number of pages	40
Date created	Friday 19 th August, 2016
Distribution	LS-DYNA® Aerospace Working Group / internal LSTC QA

Contents

1 Introduction	1
1.1 Purpose of this Document	1
2 Test Case Information	2
3 Test Case Specification	3
3.1 Test Case Purpose	3
3.2 Test Case Description	4
3.3 Model Description	6
4 Test Specifications	8
4.1 Test Case Targets	8
4.2 Pass/Fail Criteria	8
5 Test Case Results	9
5.1 Software and Hardware Specifications	9
5.2 Results Summary	10
5.3 Result Details	11
5.3.1 Test Target 1 (input deck with 105% of the ballistic limit)	12
5.3.2 Test Target 1 (input deck with 95% of the ballistic limit)	19
5.3.3 Test Target 2 (input deck with 105% of the ballistic limit)	26
5.3.4 Test Target 2 (input deck with 95% of the ballistic limit)	33
References	40

1 Introduction

1.1 Purpose of this Document

This document specifies the test case AWG-ERIF-1.1. It provides general test case information like name and ID as well as information to the confidentiality, status, and classification of the test case.

A detailed description of the test case is given, the purpose of the test case is defined, and the tested features are named. The test case specifications also state the target measures for testing and the expected results, as well as their pass and fail criteria.

Testing results are provided in section 5 for the therein mentioned LS-DYNA® version and platforms.

2 Test Case Information

Test Case Summary	
Confidentiality	external use
Test Case Name	Ballistic Impact: Ti 6-4 Projectile (solid elements) impacts a 304L SS plate (shell elements)
Test Case ID	AWG-ERIF-1.1
Test Case Status	active
Test Case Classification	Validation
Test Case Source	NASA Glenn Research Center
Tested Keyword	*CONTROL_SHELL BWC=1,2 PROJ=0,1 *MAT_024 (PIECEWISE_LINEAR_PLASTICITY) VP=0,1 *MAT_015 (JOHNSON_COOK) VP=0,1 *MAT_081 (PLASTICITY_WITH_DAMAGE) *MAT_123 (MODIFIED_PIECEWISE_LINEAR_PLASTICITY) VP=0,1
Member of Test Suite	AWG ERIF SUITE
Metadata	AWG ERIF

Table 1: Test Case Summary

3 Test Case Specification

3.1 Test Case Purpose

The purpose of Test Case ID AWG-ERIF-1.1 is the validation of an impact experiment performed at NASA Glenn Research Center. The reliability and consistency of LS-DYNA® as a finite element solver for this impact simulation is evaluated by performing analyses with various material models, element formulations/options, contact algorithm options, and hourglass algorithms (see table 4).

3.2 Test Case Description

This Test Case contains a ballistic impact of a Ti 6-4 projectile on a 304L SS plate (see figure 1). An experiment with a 7"x7"x0.04" 304L SS steel plate was chosen as the model geometry and material specification. The ballistic limit was determined by the experimental results (see figure 2).



Figure 1: Model: Ballistic Impact - Ti 6-4 Projectile impacts a 304L SS plate

The experiment is modelled via a lagrangian approach with shell elements for the steel plate and solid elements for the projectile. A summary of the experimental set-up can be found in table 2.

Physical Model Information	
plate geometry	7"x7"x0.04"
plate material	304L SS steel
projectile geometry	length = 1" , radius = 0.25"
projectile material	Ti 6-4
projectile velocity (ballistic limit see figure 2)	635 ft/s

Table 2: Experimental set-up data

The ballistic limit for a variety of impact experiments was provided by NASA Glenn Research Center (see figure 2).



Figure 2: Experimental results: ballistic limit of various impact tests

3.3 Model Description

The model geometry is discretized with solid elements for the projectile and shell elements for the steel plate. See table 3 for the number of elements and material specifications for the model. Due to symmetry conditions, a quarter model of the actual geometry is used (see figure 3). Symmetry boundary conditions are applied on the symmetry plane and the outer edges of the steel plate are simply supported. The projectile has an initial z velocity defined on all nodes and is guided along the z axis by boundary conditions applied in the x and y direction on the symmetry plane.

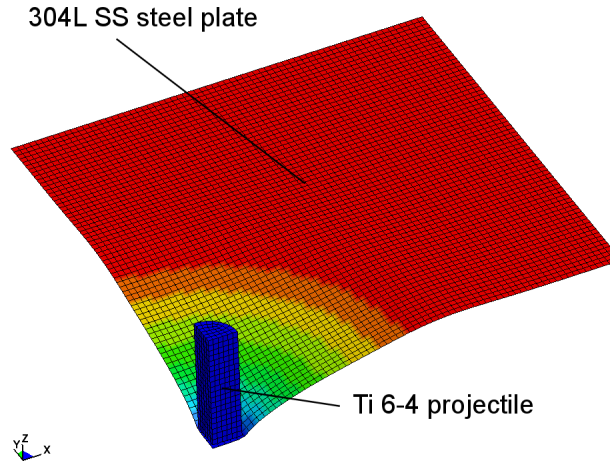


Figure 3: FEA model: Ballistic Impact - Ti 6-4 Projectile impacts a 304L SS plate

Model information	
Nodes	5944
Solid elements	640
Solid materials	1
Shell elements	4900
Shell materials	1
Parts	2
Units	in (length), s (time), lbf-s ² /in (mass), psi (stress), lbf-in (energy)

Table 3: FEA Model Information

Fourteen variations (called sub test cases) of the model are set up with different shell element formulations for the steel plate (parameter ELFORM), different warping stiffnesses in the element formulation (parameters BWC and PROJ), different material algorithms for the material behaviour, different contact algorithm options (parameter SOFT), and different approaches to hourglass stabilization (parameter IHQ). A summary of these fourteen sub test cases and the specific values for the parameters in each sub test case can be found in table 4.

For each of the 14 sub test cases, two simulations are performed to verify that the ballistic limit from the simulations is consistent with the experiment. The initial velocity of the projectile is defined to be 95% and 105% of the ballistic

limit. Models with an initial velocity of 95% of the ballistic limit should not penetrate the steel plate and models with an initial velocity of 105% of the ballistic limit should penetrate the steel plate.

The material definitions and their parameters can be found in the input decks and were provided by NASA Glenn Research Center.

Sub Test ID	ELFORM ¹	BWC ²	PROJ ³	MATERIAL ⁴	SOFT ⁵	IHQ ⁶
1	2	2	-	MAT_024	0	1-3
2	1	-	-	MAT_024	0	1-3
3	2	1	0	MAT_024	0	1-3
4	2	1	1	MAT_024	0	1-3
5	16	-	-	MAT_024	0	4-6
6	2	2	-	MAT_024	0	4-6
7	1	-	-	MAT_024	0	8
8	16	-	-	MAT_024	0	1-3
9	2	2	-	MAT_015	0	1-3
10	2	2	-	MAT_058	0	1-3
11	2	2	-	MAT_081	0	1-3
12	2	2	-	MAT_024	1	1-3
13	2	2	-	MAT_081	0	1-3
14	2	2	-	MAT_024	0	1-3

¹ Parameter ELFORM in *SECTION_SHELL keyword
² Parameter BWC in *CONTROL_SHELL keyword
³ Parameter PROJ in *CONTROL_SHELL keyword
⁴ MATERIAL is related to the LS-DYNA material number
⁵ Parameter SOFT in *CONTACT_AUTOMATIC_NODES_TO_SURFACE keyword
⁶ Parameter IHQ in *HOURLASS keyword

Table 4: Specification of sub test cases

The test case contains a total of 28 input decks, derived from the 14 sub test cases times 2 velocity definitions of 95% and 105% of the ballistic limit, respectively.

The input files names have the following format:

- **1.1.sub test ID.k** for the sub test cases with a projectile velocity of 95% of the ballistic limit
- **1.1.sub test ID.h.k** for the sub test cases with a projectile velocity of 105% of the ballistic limit

Herein the leading '1.1.' refers to the test case number, the 'sub test ID' refers to the specific combination of variable parameters in table 4 and the suffix 'h' refers to the velocity of the projectile to set to 105% of the ballistic limit.

4 Test Specifications

4.1 Test Case Targets

Table 5 displays the test case targets. The test case targets specify values or a series of values taken from the finite element analysis solution of the test case and they are used in a comparison of analysis results and experimental data. They are chosen in a way that they can be directly or indirectly compared to the experimentally determined values or observations.

Test Case Targets				
Target number	output	component type	component id	retrieved from
1	z-displacement	node	1	binout/nodout file
2	kinetic energy	part	2	binout/matsum file

Table 5: Test Case targets for Test Case ID AWG-ERIF-1.1

The target values are chosen to identify whether the projectile penetrates the plate or is stopped by the plate. Target number 1 is the displacement of the center node of the plate in the direction of the projectile. Target number 2 is the kinetic energy of the projectile. The targets are used to evaluate the perforation of the steel plate (see section 4.2).

4.2 Pass/Fail Criteria

These are the Pass/Fail criteria used for the Validation of the Test Case ID AWG-ERIF-1.1.

A sub test case with 95% of the ballistic limit passes if all of the following criteria are reached:

- The test case target 1 (z-displacement node 1) does not exceed 1 inch.
- The test case target 2 (kinetic energy part 2) is less than 90 in-lb at the end of the analysis.

Otherwise the Validation fails.

A sub test case with 105% of the ballistic limit passes if all of the following criteria are reached:

- The test case target 1 (z-displacement node 1) exceeds 1 inch.
- The test case target 2 (kinetic energy part 2) is greater than 90 in-lb at the end of the analysis.

Otherwise the Validation fails.

5 Test Case Results

5.1 Software and Hardware Specifications

In order to ensure cross-platform consistency, the herein mentioned sub test cases are run on platforms specified in table 6 and the results are calculated with software versions defined in table 7.

Platform Name	Operating system	CPU type	MPI-Protocol	Number of cpu's ¹
sandwich	SUSE LES 11.1	Intel [®] Xeon [®] E7- 8837 @ 2.67GHz	Platform MPI 8.2.0.0	4
ham	CentOS 5.4	AMD [®] Opteron [®] 8435 @ 800MHz	Platform MPI 8.1.0.0	4
sgi64e	SUSE LES 9.4 ²	Intel [®] Itanium [®] 2 @ 1.6GHz	SGI MPT 1.13	4

¹ Number of cpu's used for calculation of the test case

² SGI PROPACK 4

Table 6: Used Platforms and CPU Type's

Product	Version	Release	Revision	Parallel type ¹	Precision ²	executable
LS-DYNA [®]	971	R9.0	108899	SMP	SP	ls971.108899.R9.0
LS-DYNA [®]	971	R9.0	108899	SMP	DP	ld971.108899.R9.0
LS-DYNA [®]	971	R9.0	108899	MPP	SP	mpp971.108899.R9.0
LS-DYNA [®]	971	R9.0	108899	MPP	DP	mpd971.108899.R9.0

¹ MPP = Massively Parallel Processing, SMP = Symmetric Multiprocessing

² SP = single precision, DP = double precision

Table 7: Tested LS-DYNA[®] version

5.2 Results Summary

Table 8 contains the results of the Test Case ID AWG-ERIF-1.1 completed with all combinations of software and hardware defined in section 5.1 (14 * 2 * 3 * 4 - 3 total cases).

Details on the test results can be found in the section 5.3.

The table 8 validation summary is:

- **PASS** - Pass criteria in section 4.2 is attained.
- **FAILED** - Pass criteria in section 4.2 is not attained.
- **ERROR** - sub test case terminates due to error.
- **N/A** - sub test case was not calculated.

Sub Test ID	95% ballistic limit	105% ballistic limit
1	PASS	PASS
2	PASS	PASS
3	PASS	PASS
4	PASS	PASS
5	PASS	PASS
6	PASS	PASS
7	PASS	PASS
8	PASS	PASS
9	FAILED	PASS
10	N/A	N/A
11	PASS	FAILED
12	PASS	FAILED
13	PASS	PASS
14	PASS	FAILED

Table 8: Validation results summary for Test Case ID AWG-ERIF-1.1

5.3 Result Details

The following subsections contain detailed results for the Test Case ID AWG-ERIF-1.1 for LS-DYNA® R9.0 Revision 108899.

For each sub test case defined in section 3.3 there is a graph displaying the time history of the result target defined in section 4.1 for the platform and software version combinations defined in section 5.1.

The title of the graph states the name of the input deck, the result file name, and the output separated by underscores. The legend contains the result file name, output, platform, and executable. The last number of the legend specifies the number of cpu's used to calculate the example. A leading minus sign refers to the compatibility option for SMP calculations (see [1] for details on this option).

Example for title and legend:

Title:

'1.1.1.h.k: glstat_internal_energy' states that the input deck for sub test case 1 run at 105% of the ballistic limit was used to calculate these results. The component displayed is the internal energy derived from the 'glstat' output file.

Legend:

'glstat_internal_energy_sandwich_ls971.108899.R9.0_4' states that the graph shows the internal energy derived from the 'glstat' output file for an input deck which was calculated on the 'sandwich' platform with a LS-DYNA® R9.0 Revision 108899 binary (SMP, single precision) on four processors.

5.3.1 Test Target 1 (input deck with 105% of the ballistic limit)

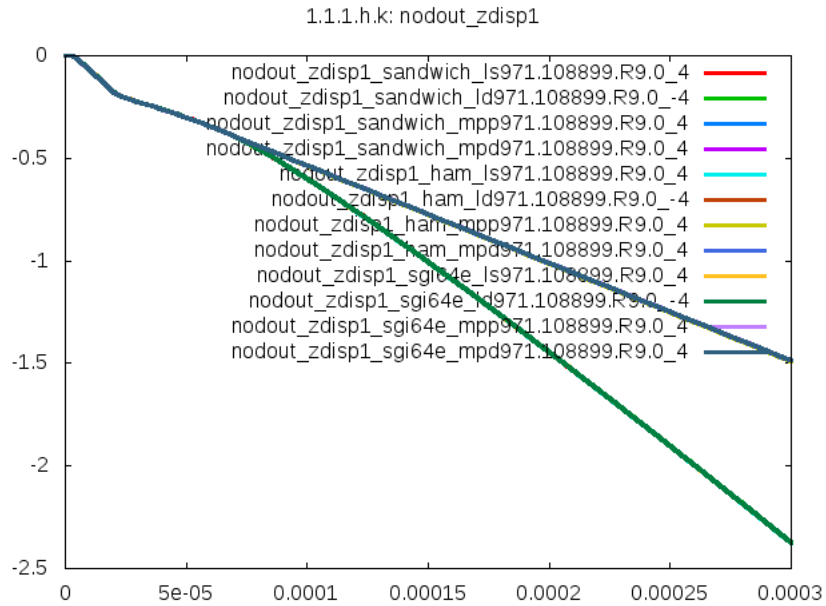


Figure 4: Cross platform results, nodal z displacement node 1, sub test case ID 1, 105% ballistic limit

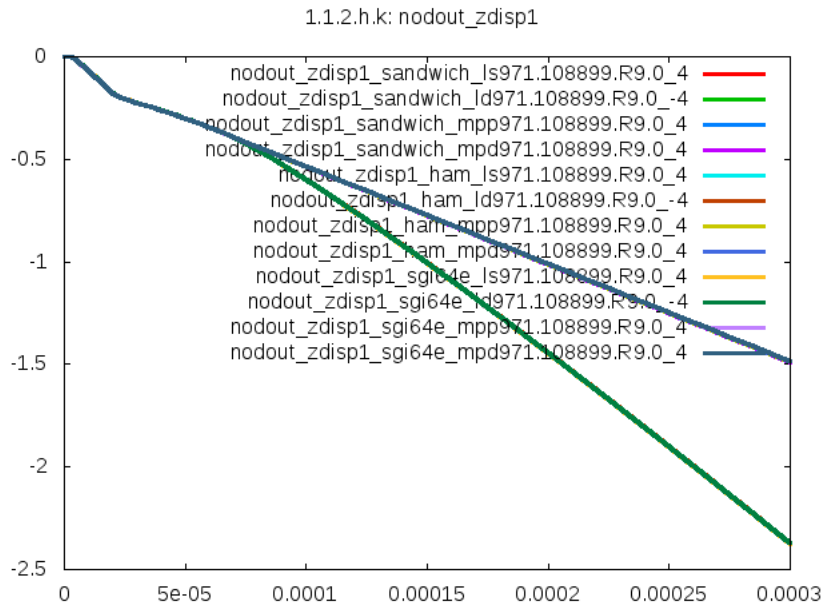


Figure 5: Cross platform results, nodal z displacement node 1, sub test case ID 2, 105% ballistic limit

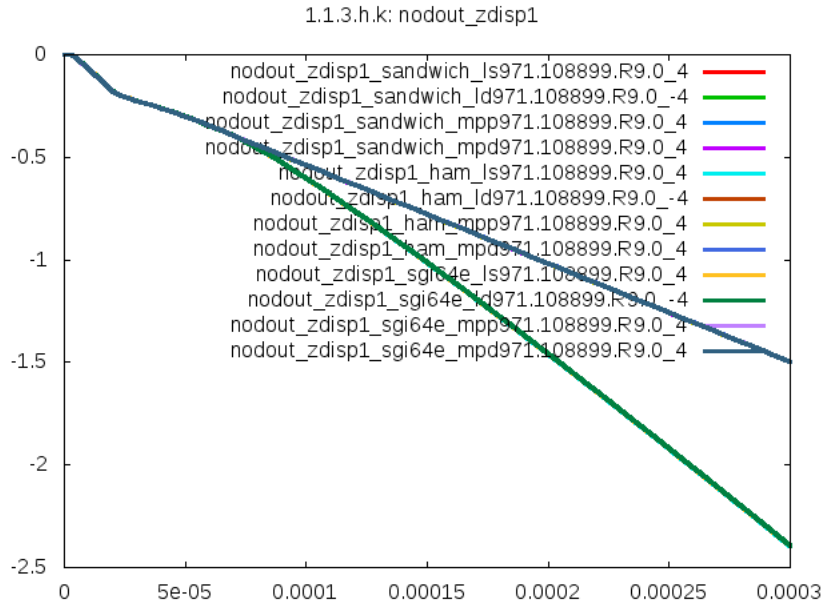


Figure 6: Cross platform results, nodal z displacement node 1, sub test case ID 3, 105% ballistic limit

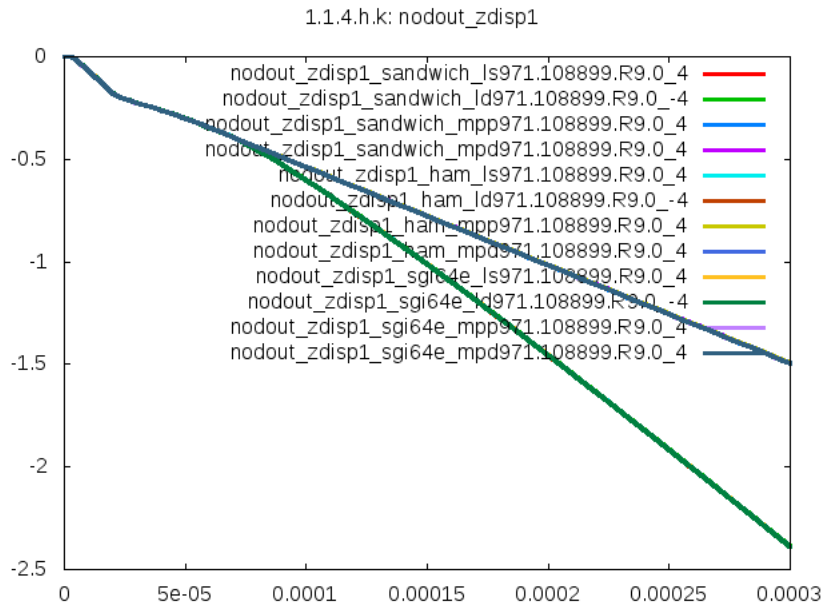


Figure 7: Cross platform results, nodal z displacement node 1, sub test case ID 4, 105% ballistic limit

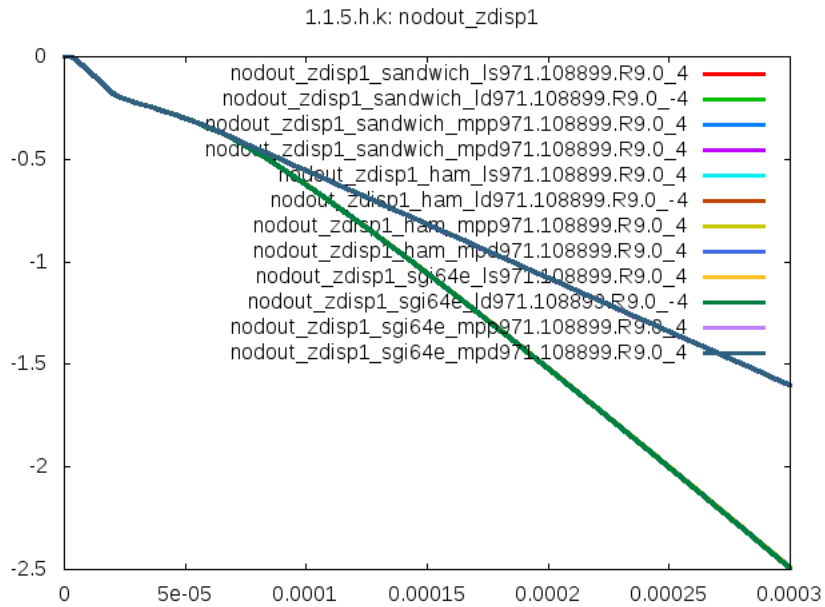


Figure 8: Cross platform results, nodal z displacement node 1, sub test case ID 5, 105% ballistic limit

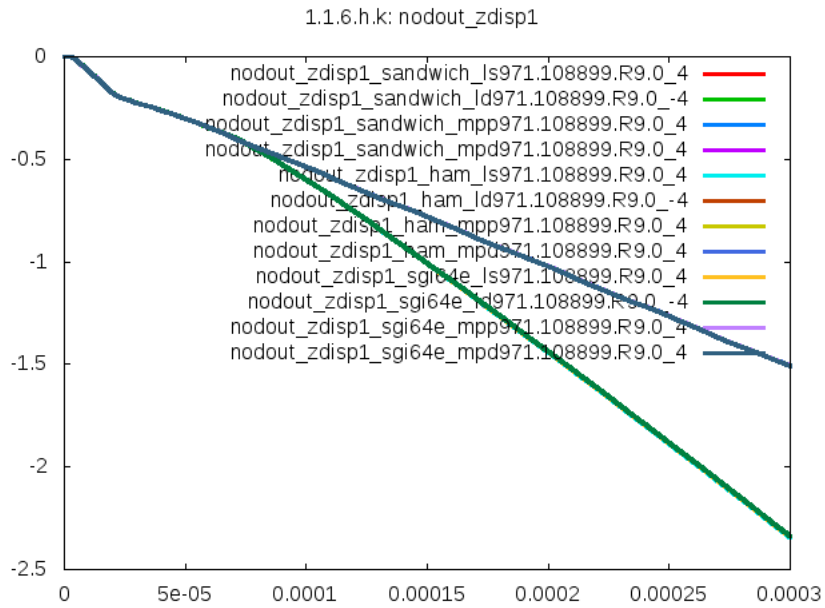


Figure 9: Cross platform results, nodal z displacement node 1, sub test case ID 6, 105% ballistic limit

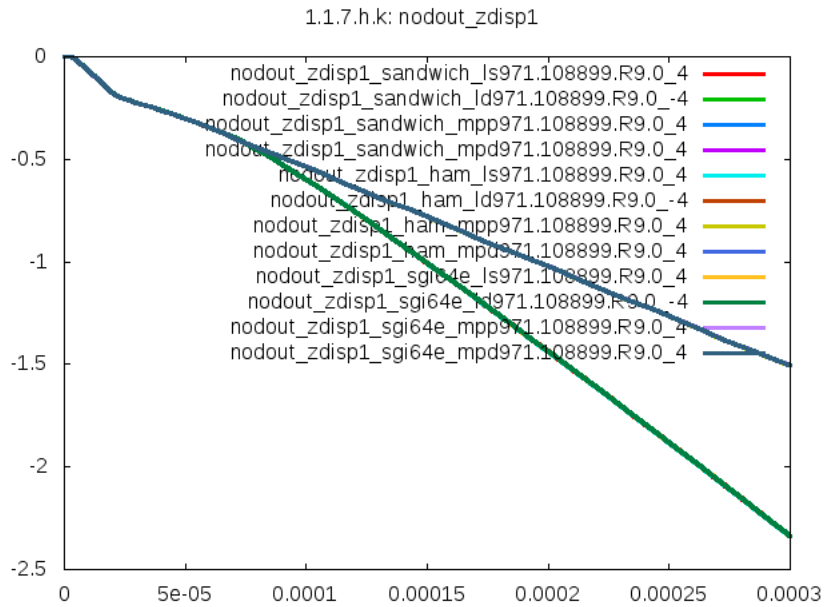


Figure 10: Cross platform results, nodal z displacement node 1, sub test case ID 7, 105% ballistic limit

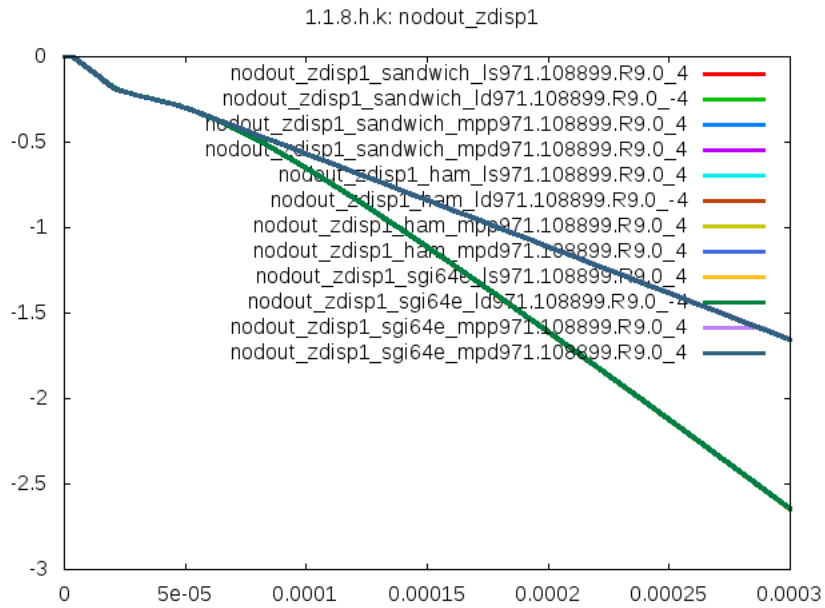


Figure 11: Cross platform results, nodal z displacement node 1, sub test case ID 8, 105% ballistic limit

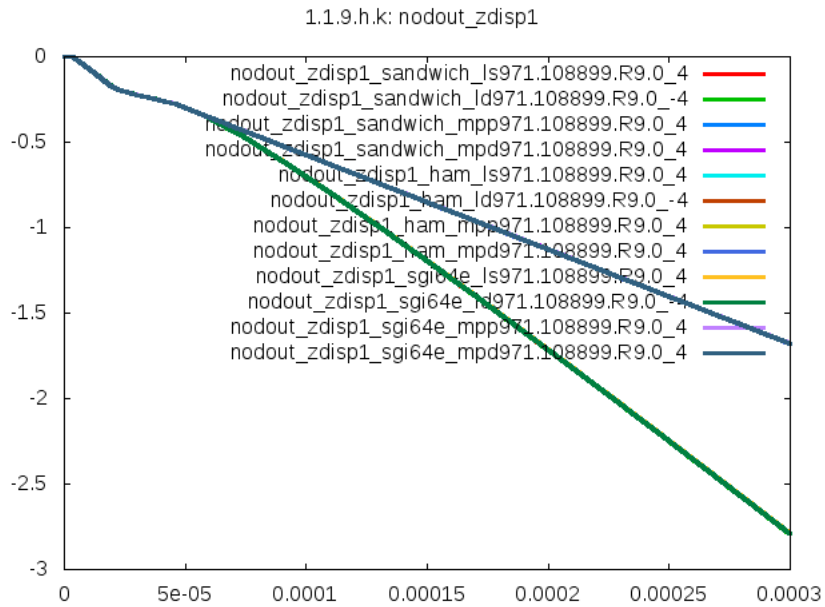


Figure 12: Cross platform results, nodal z displacement node 1, sub test case ID 9, 105% ballistic limit

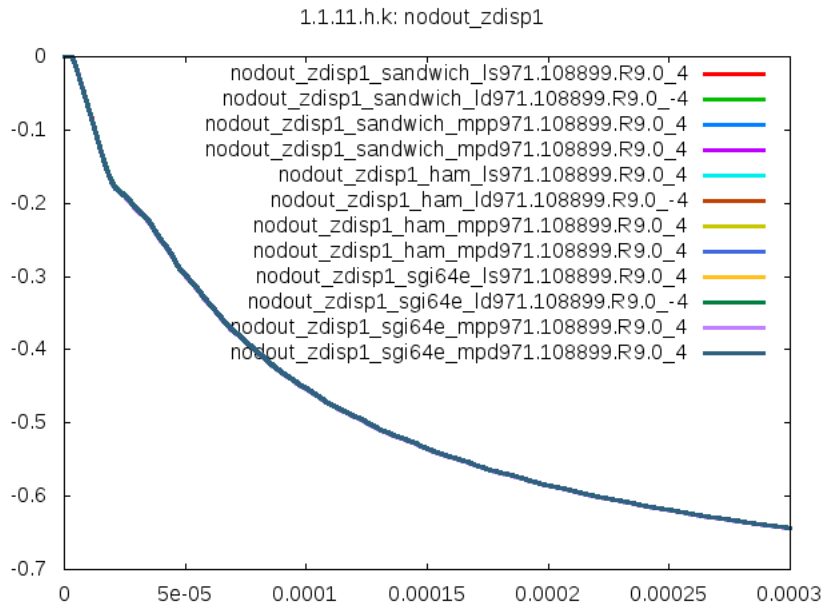


Figure 13: Cross platform results, nodal z displacement node 1, sub test case ID 11, 105% ballistic limit

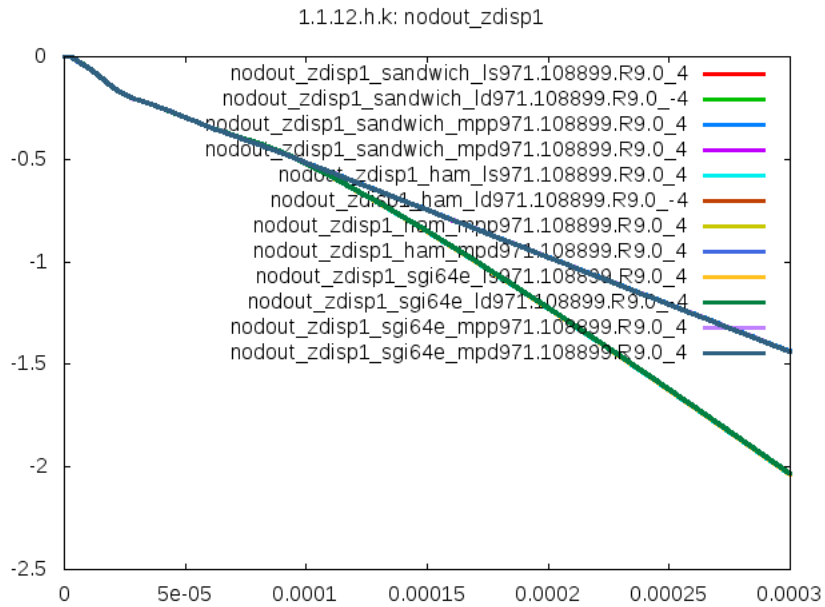


Figure 14: Cross platform results, nodal z displacement node 1, sub test case ID 12, 105% ballistic limit

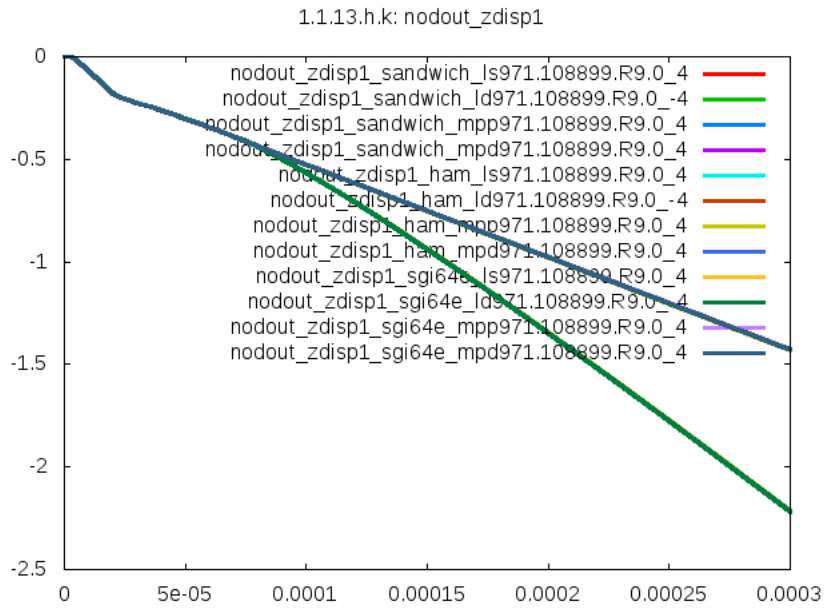


Figure 15: Cross platform results, nodal z displacement node 1, sub test case ID 13, 105% ballistic limit

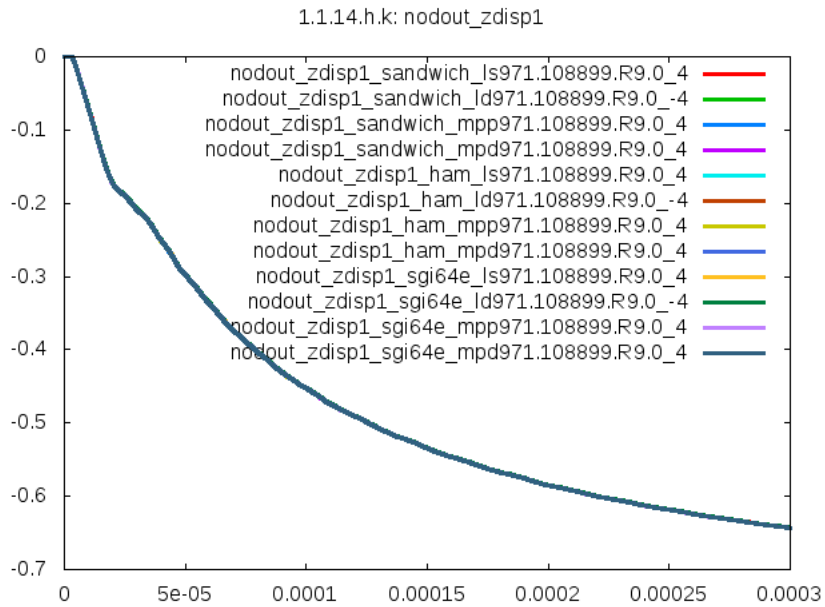


Figure 16: Cross platform results, nodal z displacement node 1, sub test case ID 14, 105% ballistic limit

5.3.2 Test Target 1 (input deck with 95% of the ballistic limit)

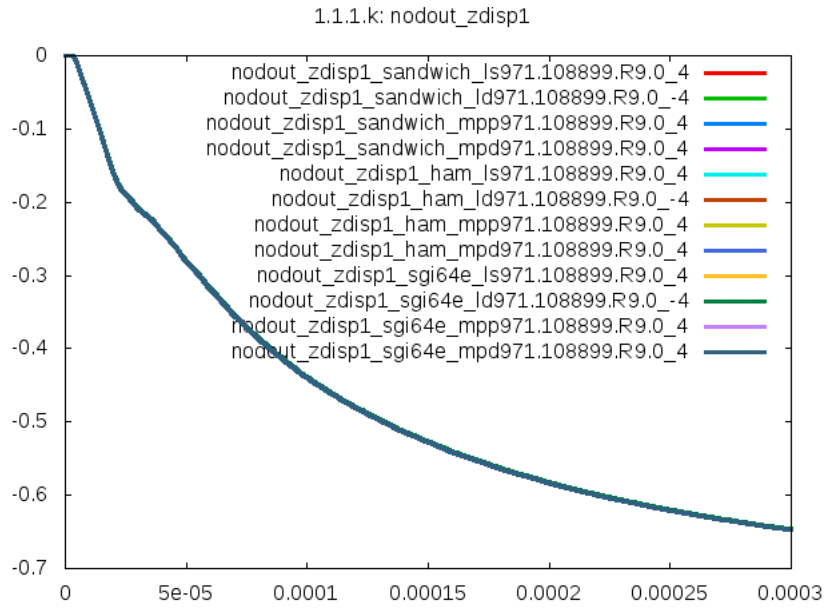


Figure 17: Cross platform results, nodal z displacement node 1, sub test case ID 1, 95% ballistic limit

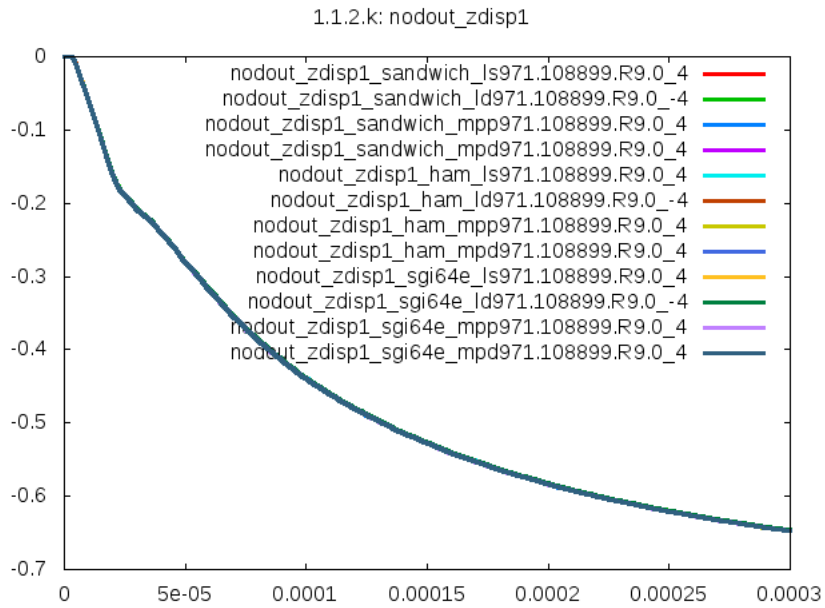


Figure 18: Cross platform results, nodal z displacement node 1, sub test case ID 2, 95% ballistic limit

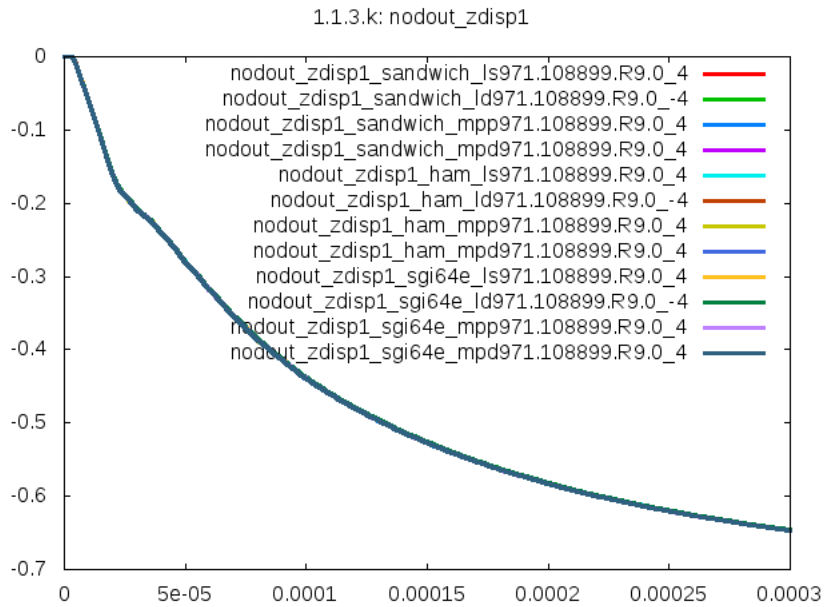


Figure 19: Cross platform results, nodal z displacement node 1, sub test case ID 3, 95% ballistic limit

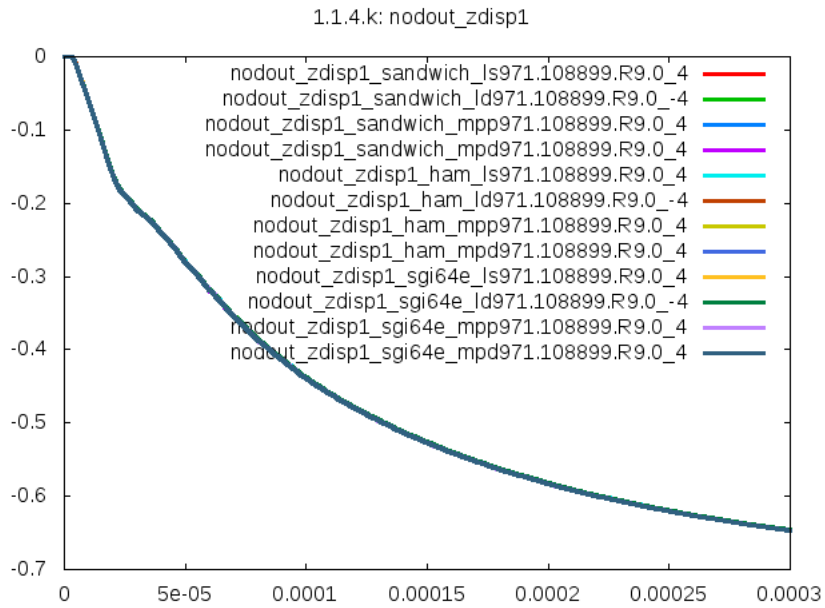


Figure 20: Cross platform results, nodal z displacement node 1, sub test case ID 4, 95% ballistic limit

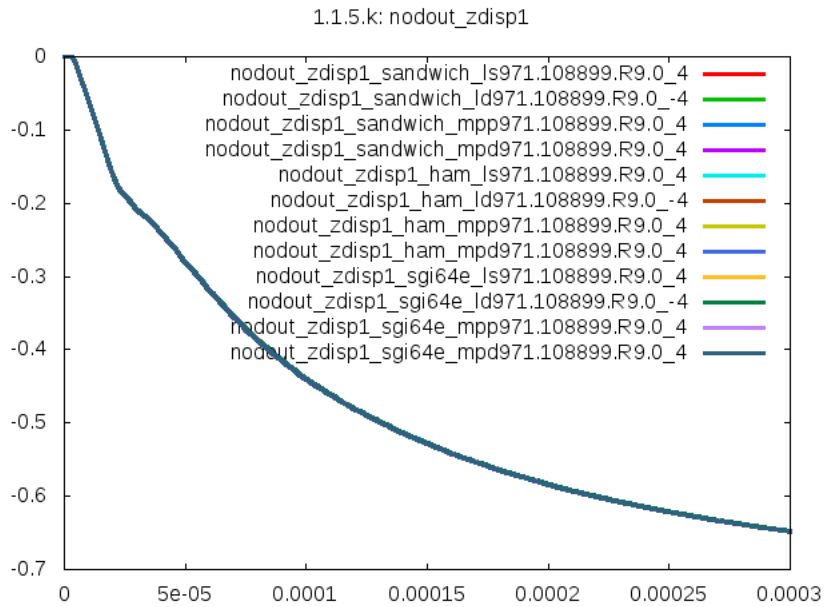


Figure 21: Cross platform results, nodal z displacement node 1, sub test case ID 5, 95% ballistic limit

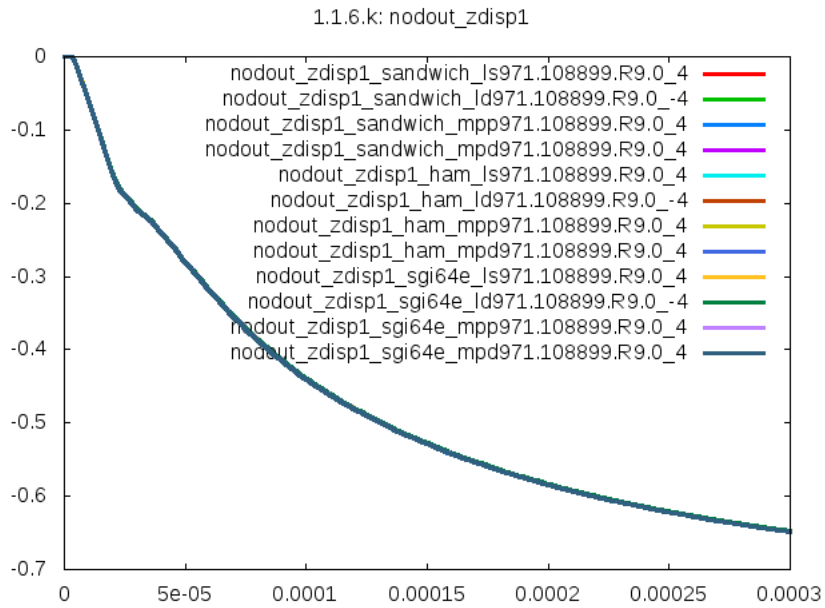


Figure 22: Cross platform results, nodal z displacement node 1, sub test case ID 6, 95% ballistic limit

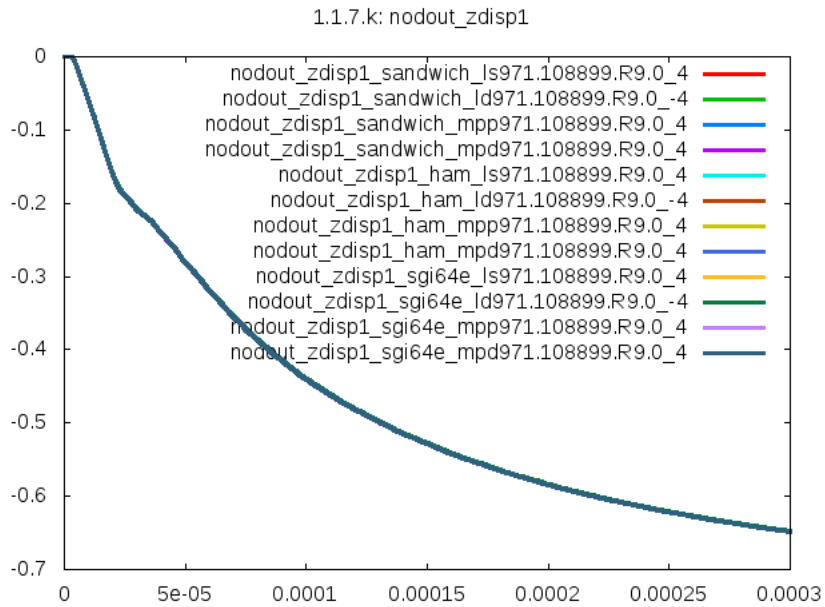


Figure 23: Cross platform results, nodal z displacement node 1, sub test case ID 7, 95% ballistic limit

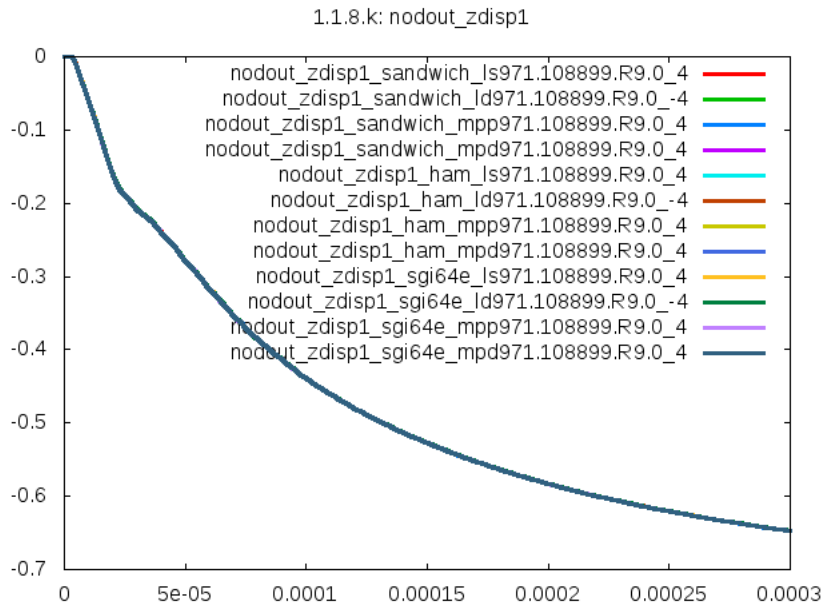


Figure 24: Cross platform results, nodal z displacement node 1, sub test case ID 8, 95% ballistic limit

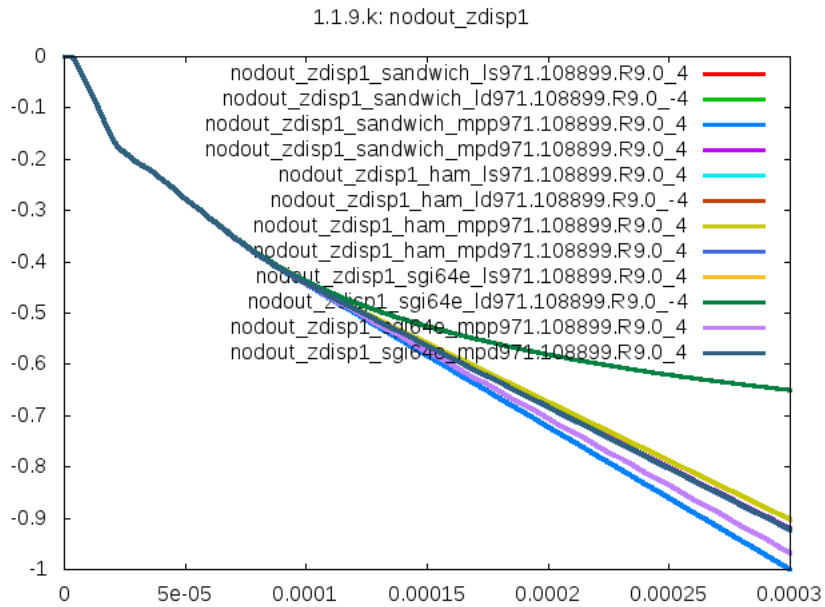


Figure 25: Cross platform results, nodal z displacement node 1, sub test case ID 9, 95% ballistic limit

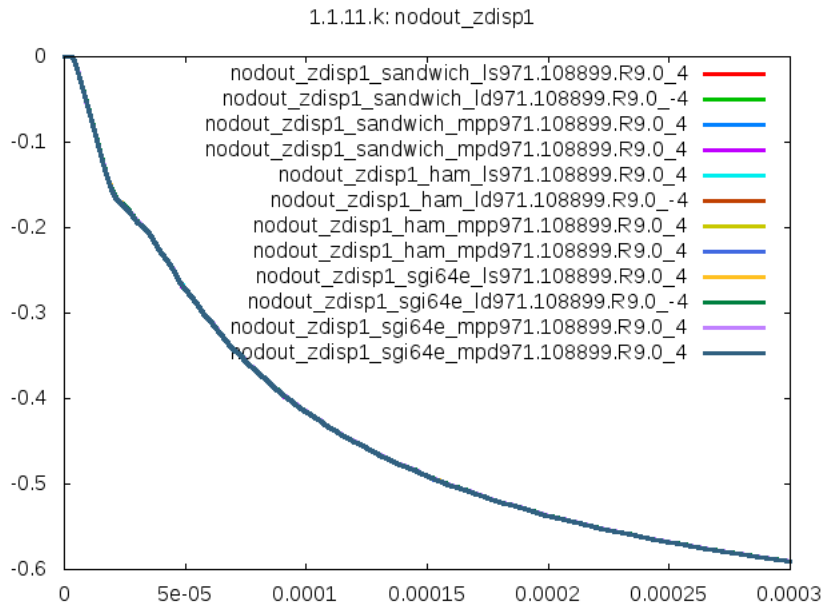


Figure 26: Cross platform results, nodal z displacement node 1, sub test case ID 11, 95% ballistic limit

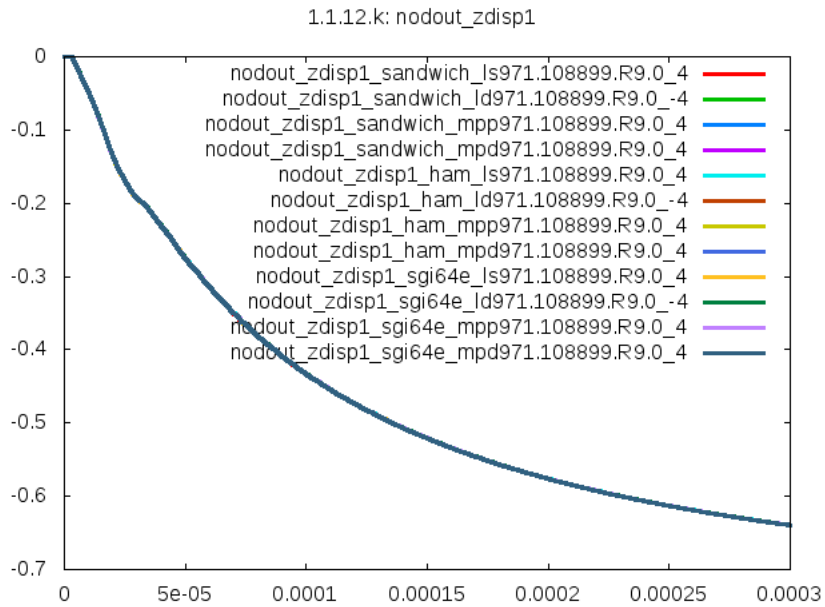


Figure 27: Cross platform results, nodal z displacement node 1, sub test case ID 12, 95% ballistic limit

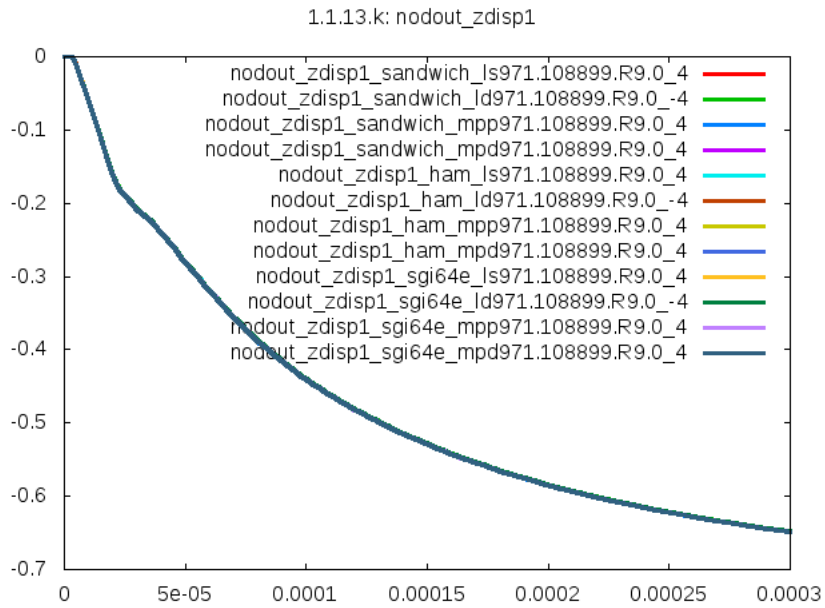


Figure 28: Cross platform results, nodal z displacement node 1, sub test case ID 13, 95% ballistic limit

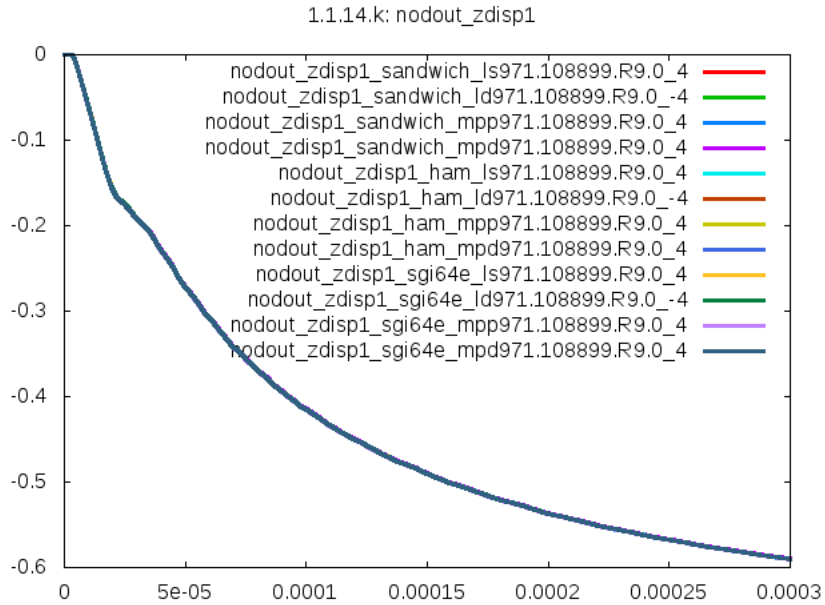


Figure 29: Cross platform results, nodal z displacement node 1, sub test case ID 14, 95% ballistic limit

5.3.3 Test Target 2 (input deck with 105% of the ballistic limit)

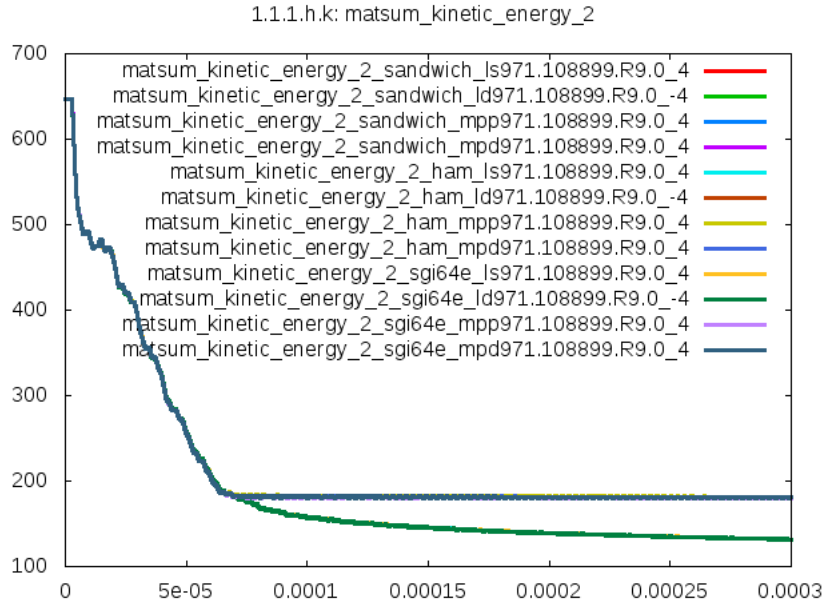


Figure 30: Cross platform results, kinetic energy part 2, sub test case ID 1, 105% ballistic limit

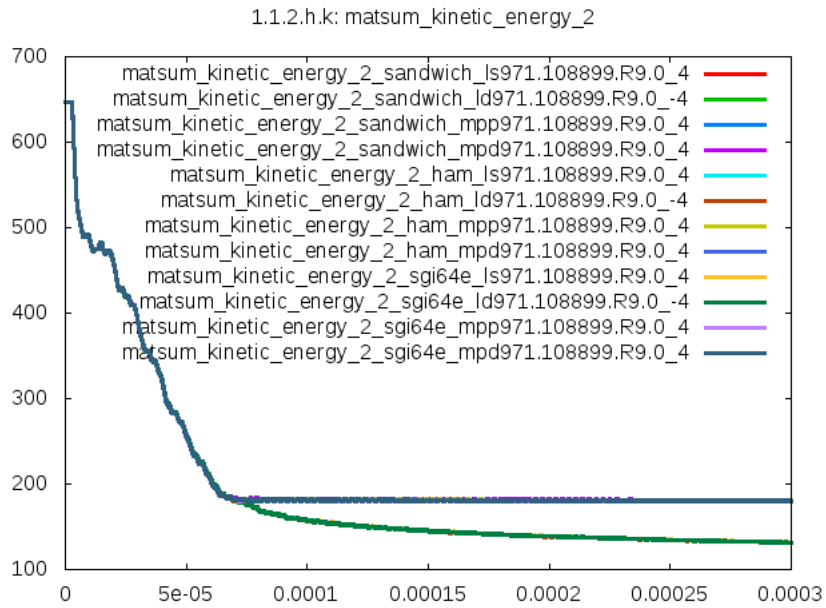


Figure 31: Cross platform results, kinetic energy part 2, sub test case ID 2, 105% ballistic limit

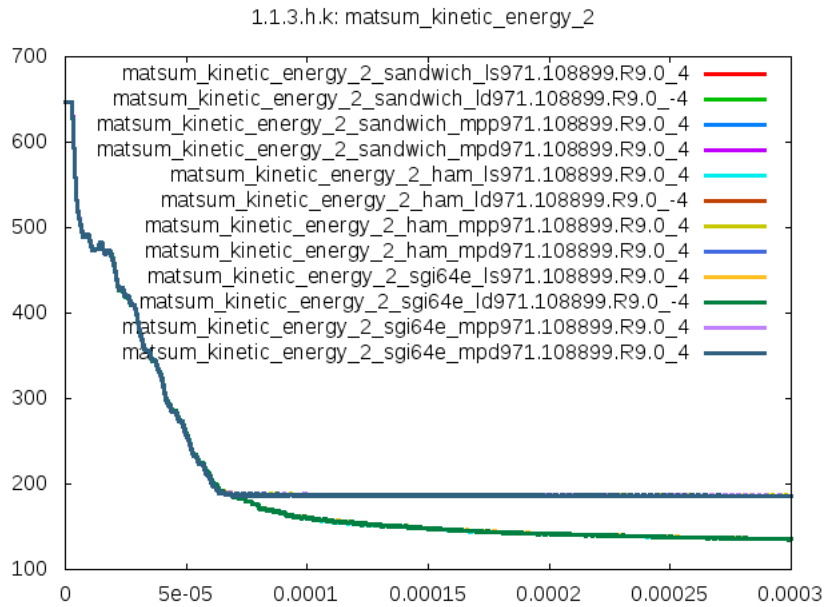


Figure 32: Cross platform results, kinetic energy part 2, sub test case ID 3, 105% ballistic limit

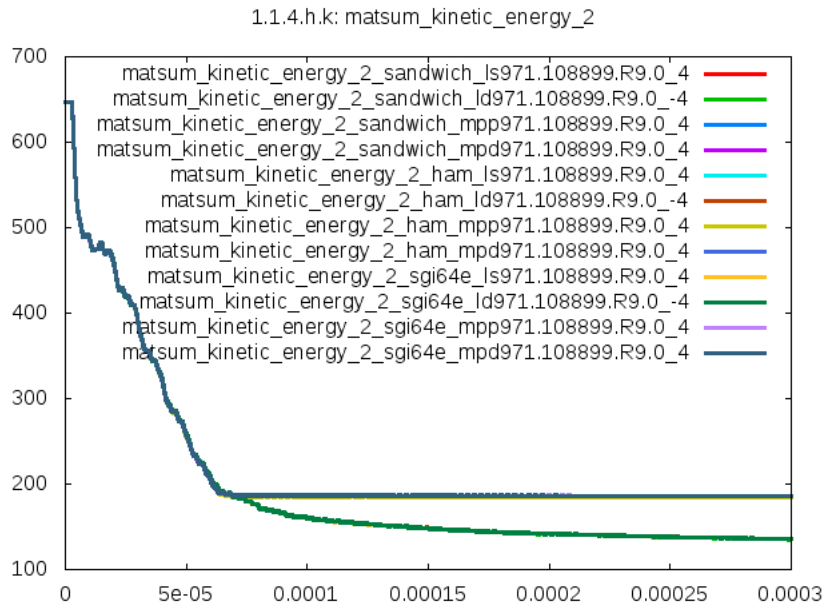


Figure 33: Cross platform results, kinetic energy part 2, sub test case ID 4, 105% ballistic limit

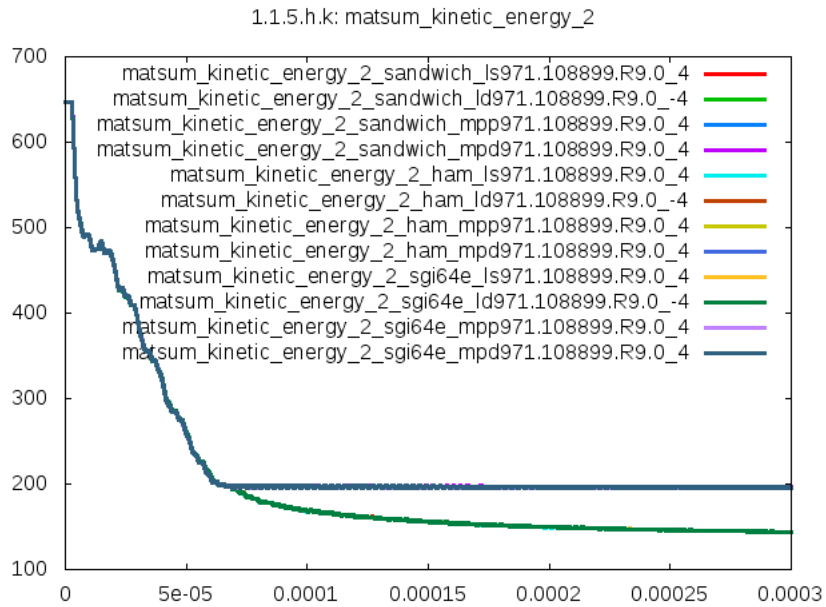


Figure 34: Cross platform results, kinetic energy part 2, sub test case ID 5, 105% ballistic limit

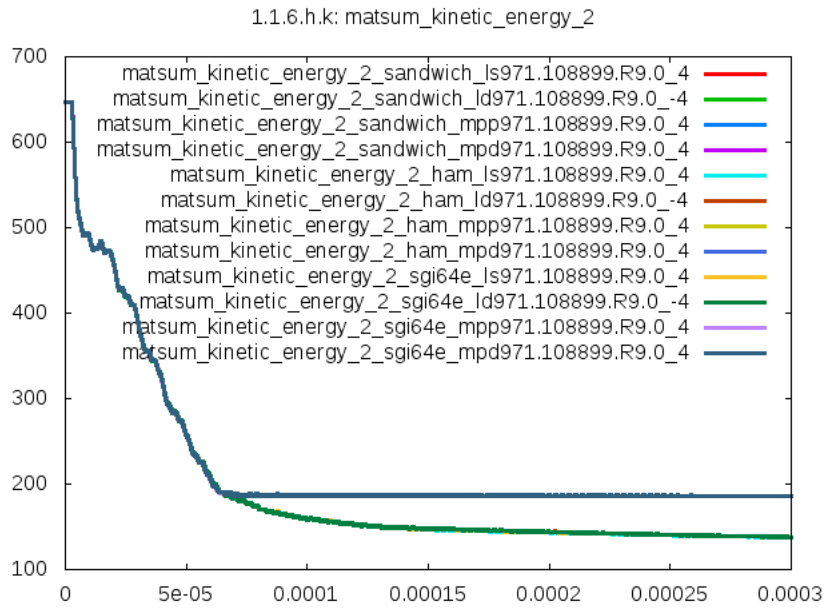


Figure 35: Cross platform results, kinetic energy part 2, sub test case ID 6, 105% ballistic limit

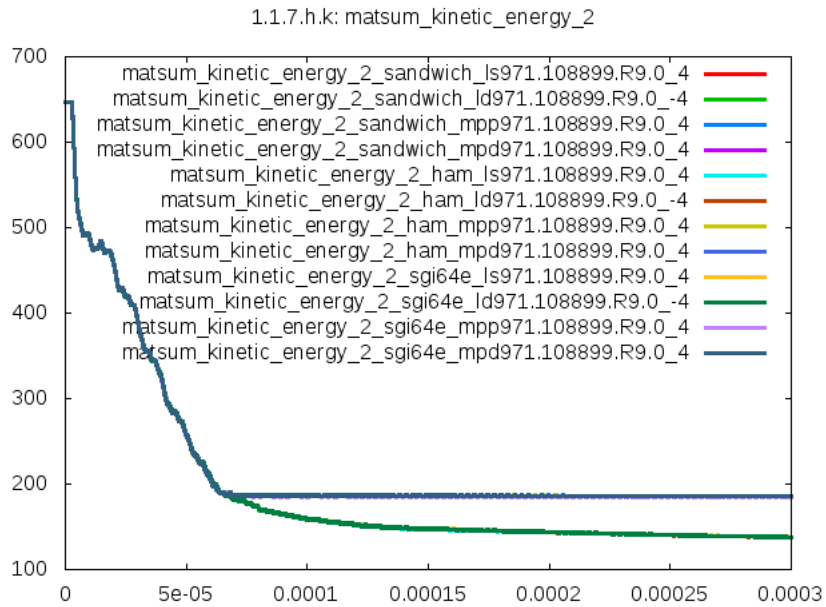


Figure 36: Cross platform results, kinetic energy part 2, sub test case ID 7, 105% ballistic limit

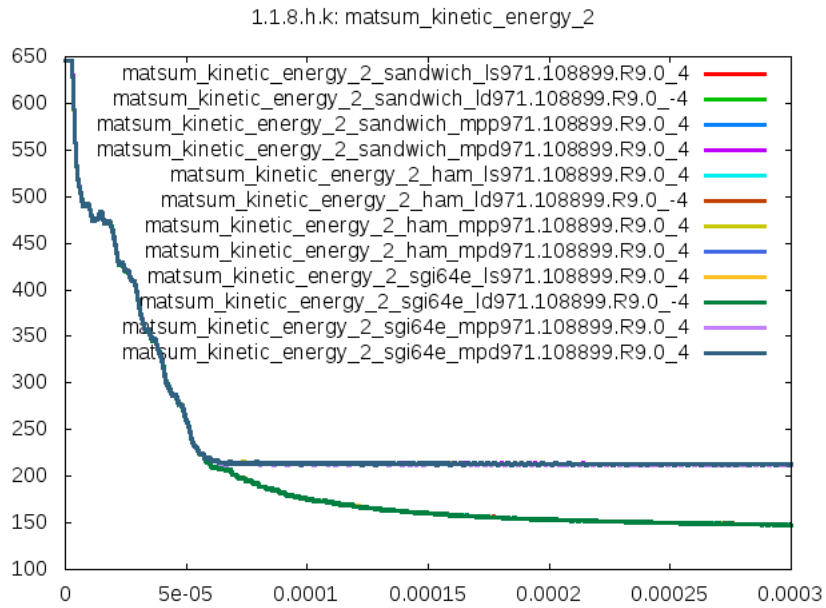


Figure 37: Cross platform results, kinetic energy part 2, sub test case ID 8, 105% ballistic limit

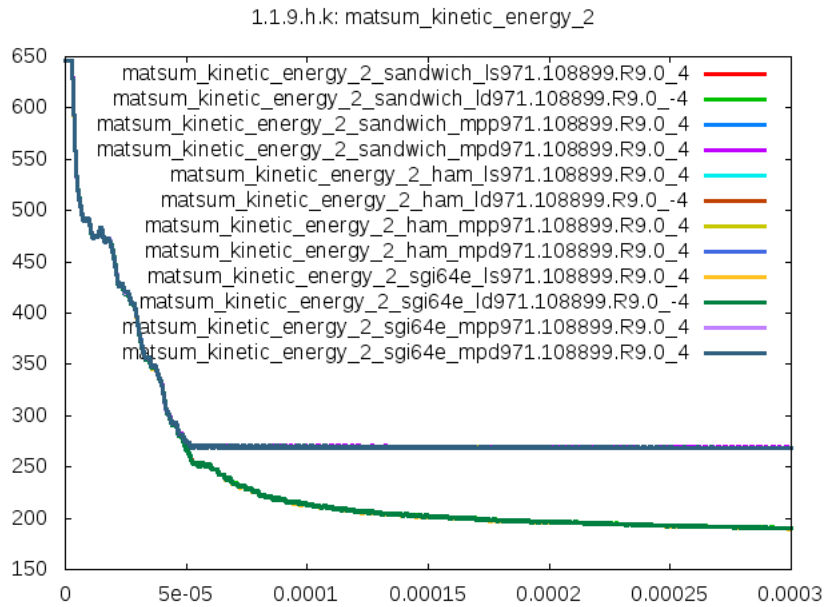


Figure 38: Cross platform results, kinetic energy part 2, sub test case ID 9, 105% ballistic limit

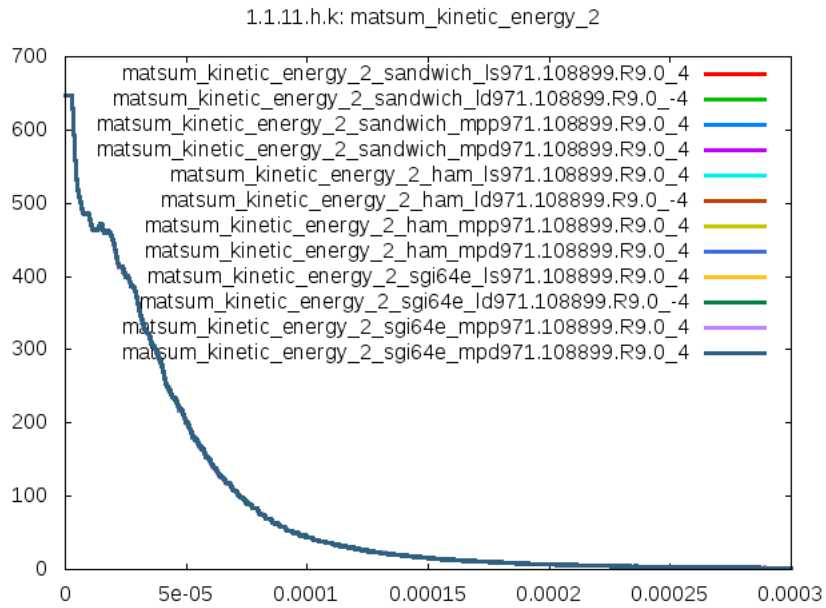


Figure 39: Cross platform results, kinetic energy part 2, sub test case ID 11, 105% ballistic limit

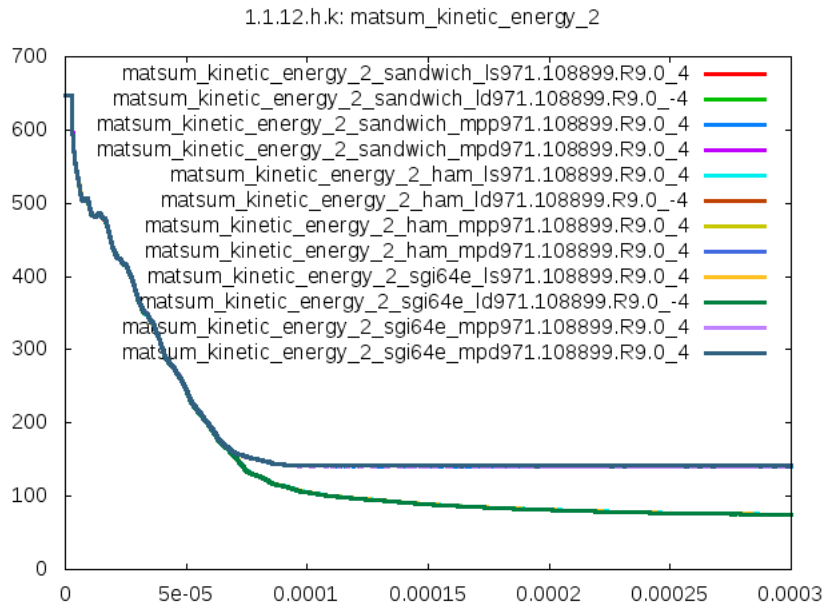


Figure 40: Cross platform results, kinetic energy part 2, sub test case ID 12, 105% ballistic limit

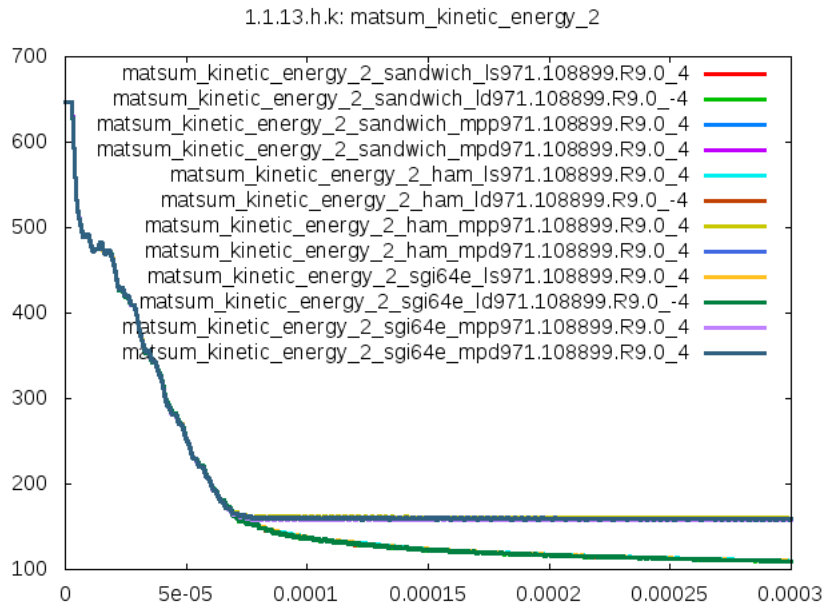


Figure 41: Cross platform results, kinetic energy part 2, sub test case ID 13, 105% ballistic limit

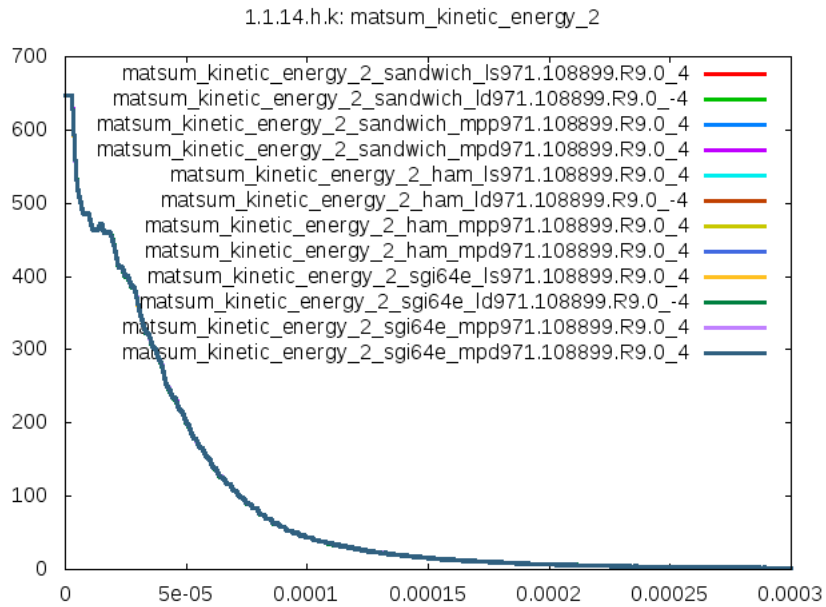


Figure 42: Cross platform results, kinetic energy part 2, sub test case ID 14, 105% ballistic limit

5.3.4 Test Target 2 (input deck with 95% of the ballistic limit)

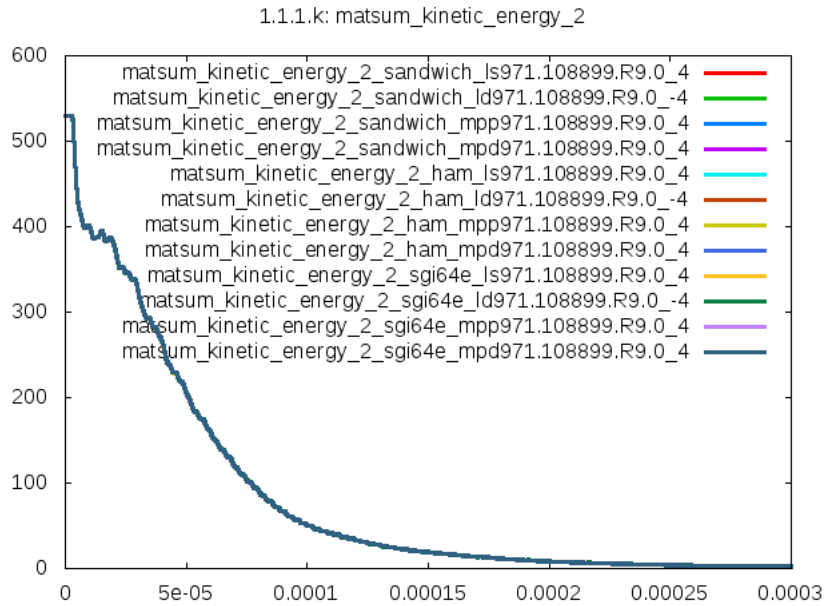


Figure 43: Cross platform results, kinetic energy part 2, sub test case ID 1, 95% ballistic limit

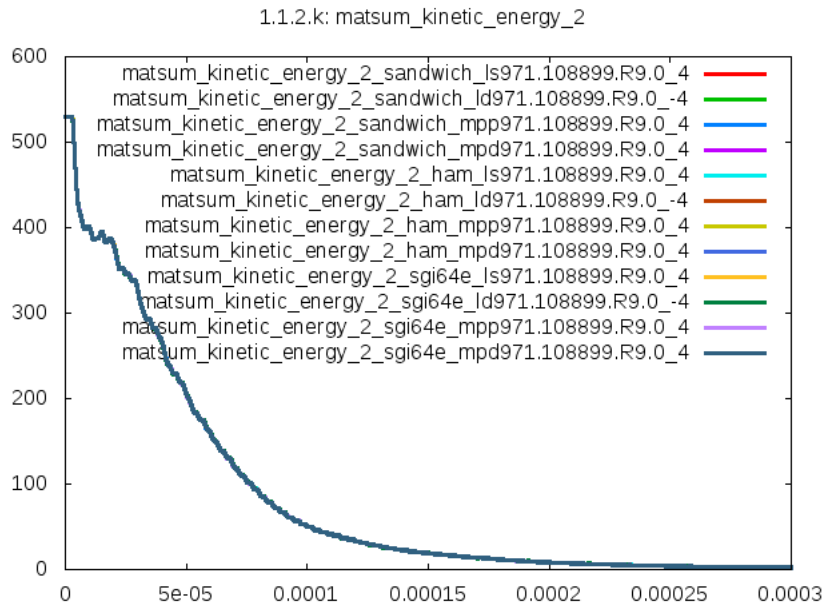


Figure 44: Cross platform results, kinetic energy part 2, sub test case ID 2, 95% ballistic limit

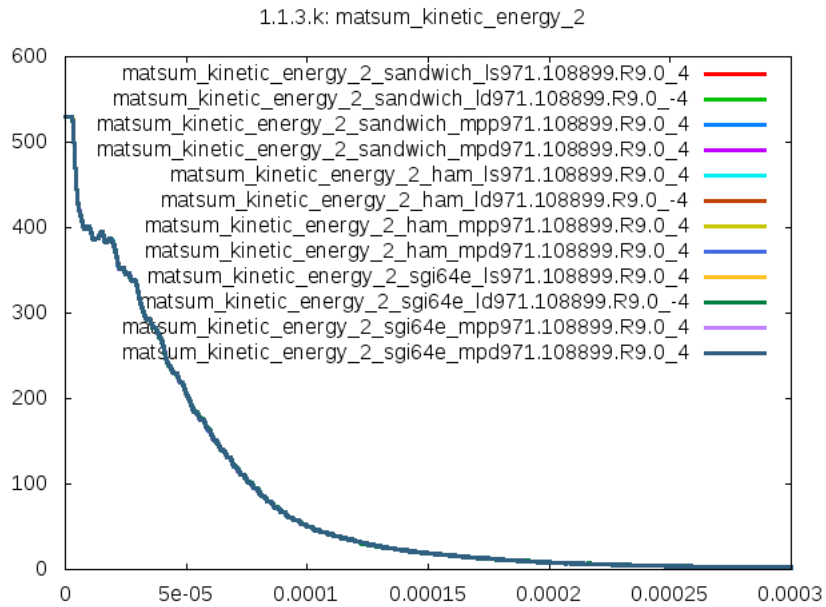


Figure 45: Cross platform results, kinetic energy part 2, sub test case ID 3, 95% ballistic limit

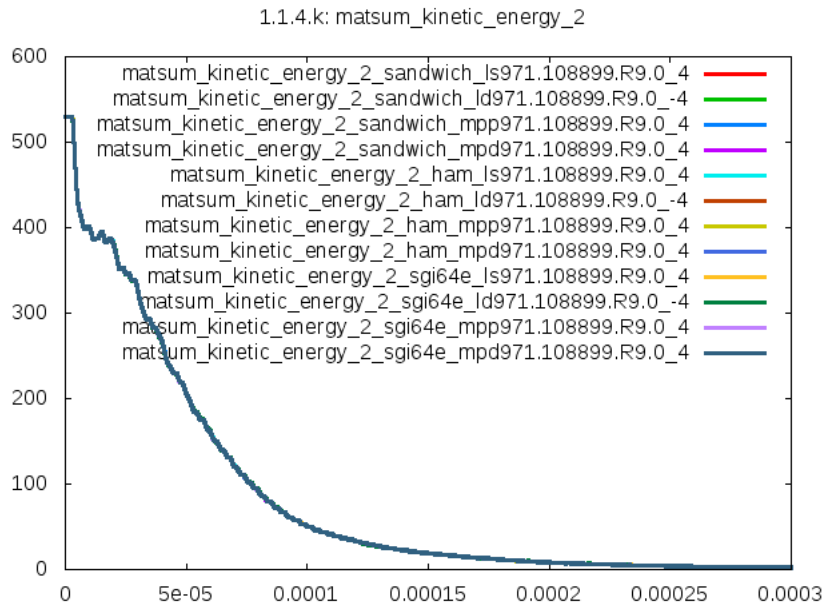


Figure 46: Cross platform results, kinetic energy part 2, sub test case ID 4, 95% ballistic limit

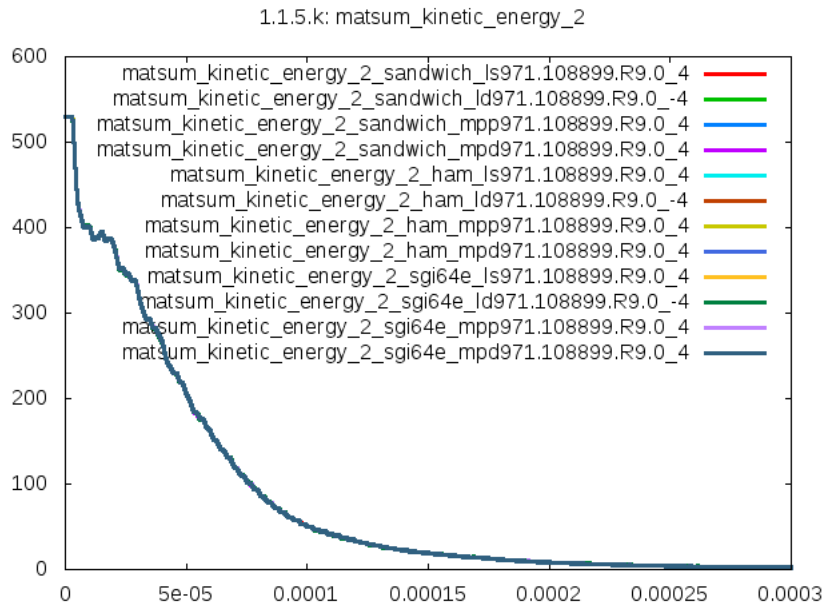


Figure 47: Cross platform results, kinetic energy part 2, sub test case ID 5, 95% ballistic limit

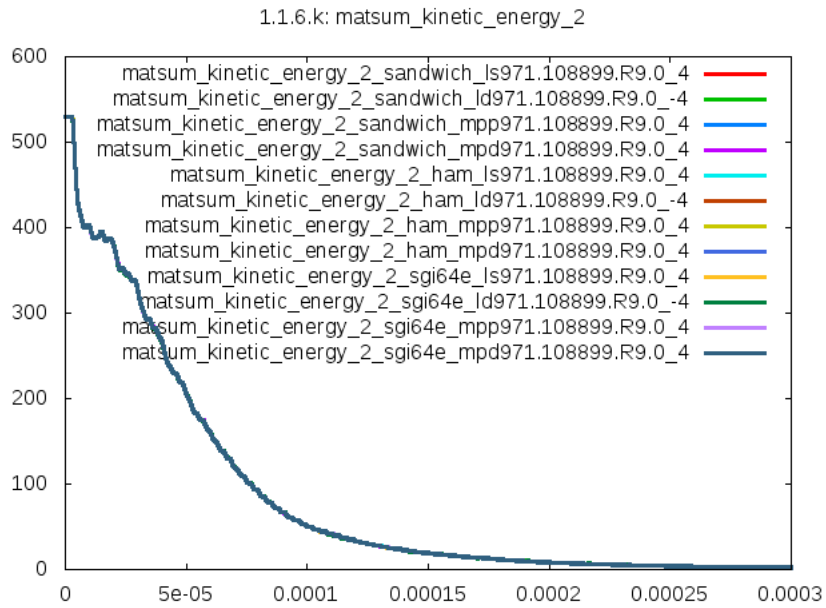


Figure 48: Cross platform results, kinetic energy part 2, sub test case ID 6, 95% ballistic limit

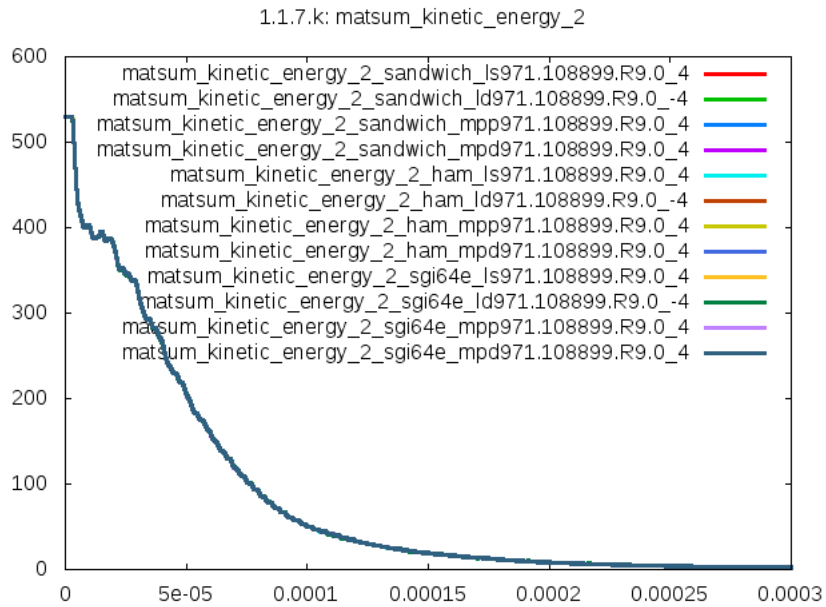


Figure 49: Cross platform results, kinetic energy part 2, sub test case ID 7, 95% ballistic limit

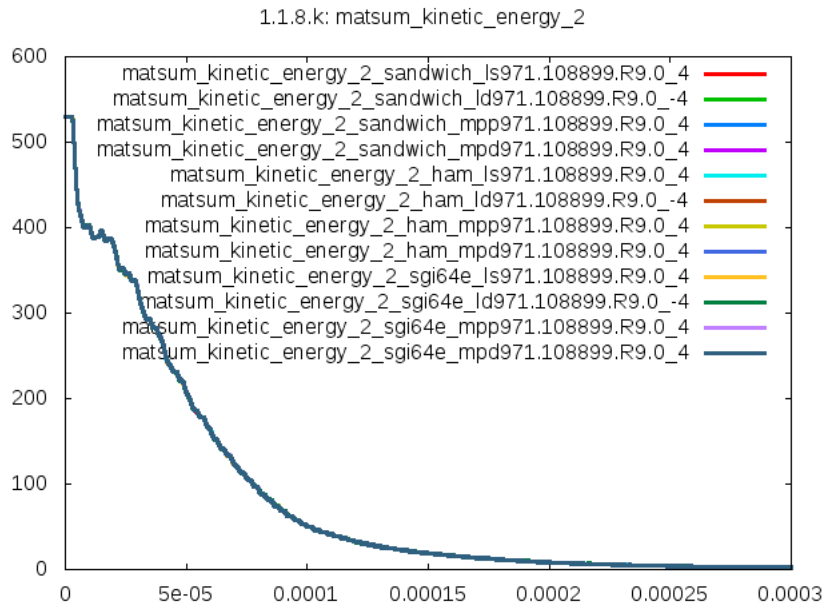


Figure 50: Cross platform results, kinetic energy part 2, sub test case ID 8

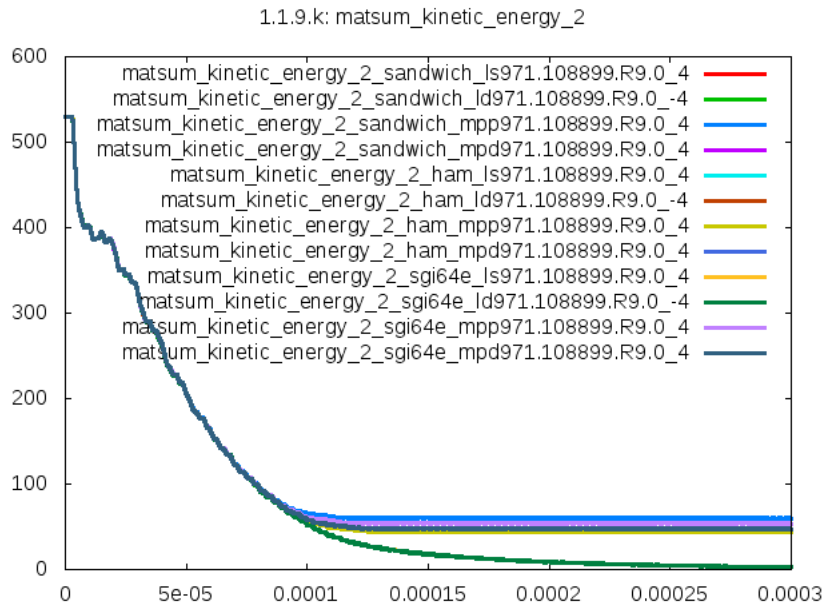


Figure 51: Cross platform results, kinetic energy part 2, sub test case ID 9, 95% ballistic limit

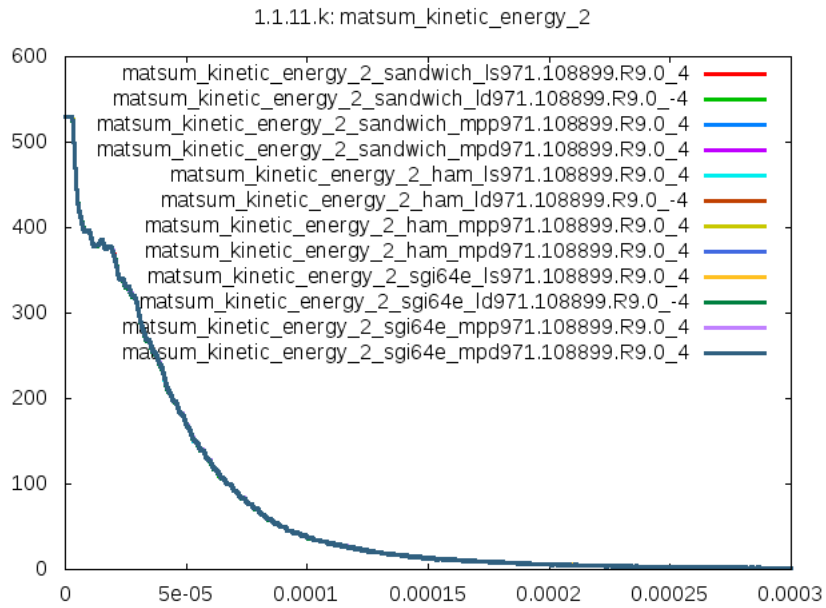


Figure 52: Cross platform results, kinetic energy part 2, sub test case ID 11, 95% ballistic limit

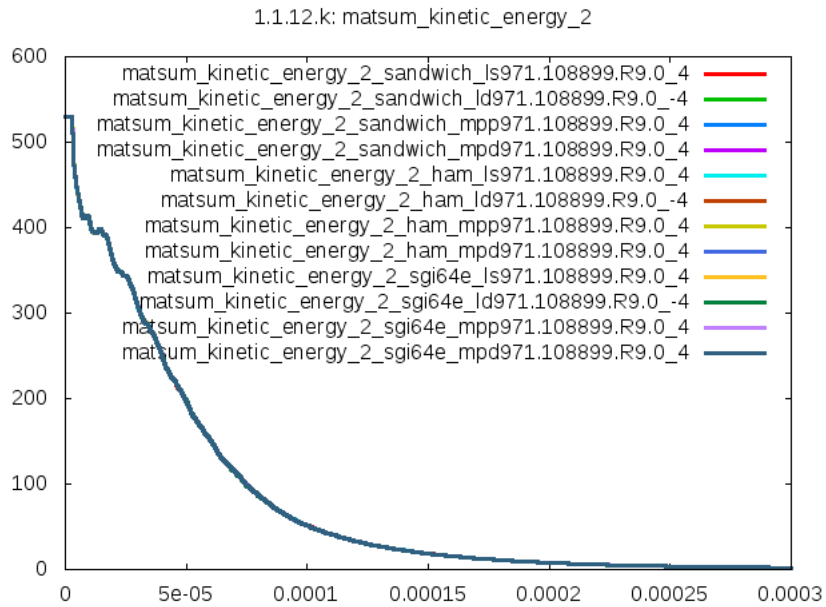


Figure 53: Cross platform results, kinetic energy part 2, sub test case ID 12, 95% ballistic limit

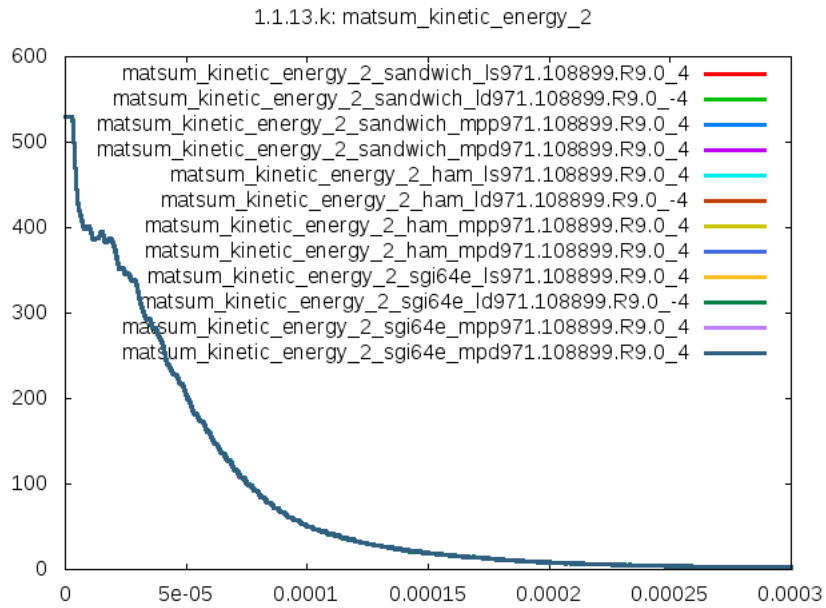


Figure 54: Cross platform results, kinetic energy part 2, sub test case ID 13, 95% ballistic limit

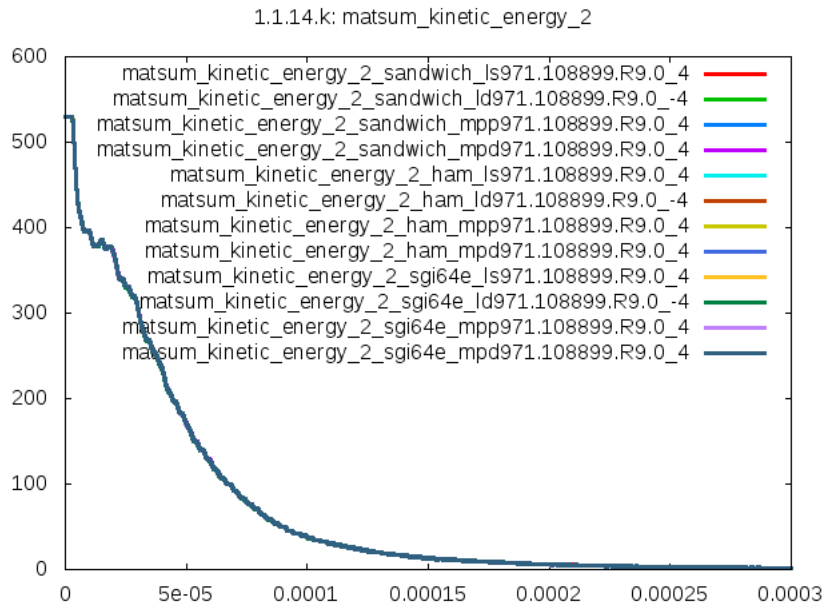


Figure 55: Cross platform results, kinetic energy part 2, sub test case ID 14, 95% ballistic limit

References

- [1] LSTC, *LS-DYNA KEYWORD USER MANUAL*, 7374 Las Positas Road, Livermore, CA, 94551, USA, version 971 ed., May 2007.